

# Network Application Platforms

Hardware platforms for next generation networking infrastructure



# FW-8865 V1.0

User's Manual Publication date:2012-10-23



## About

## **Overview**

### **Icon Descriptions**

The icons are used in the manual to serve as an indication of interest topics or important messages. Below is a description of these icons:



**NOTE:** This check mark indicates that there is a note of interest and is something that you should pay special attention to while using the product.



**WARNING:** This exclamation point indicates that there is a caution or warning and it is something that could damage your property or product.

### **Online Resources**

The listed websites are links to the on-line product information and technical support.

Resource	Website
Lanner	http://www.lannerinc.com
Product Resources	http://assist.lannerinc.com
RMA	http://eRMA.lannerinc.com

### **Copyright and Trademarks**

This document is copyrighted, © 2010. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, nor for any infringements upon the rights of third parties that may result from such use.

### Acknowledgement

Intel, Pentium and Celeron are registered trademarks of Intel Corp.

Microsoft Windows and MS-DOS are registered trademarks of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

### Compliances

### CE

This product has passed the CE test for environmental specifications. Test conditions for passing included the equipment being operated within an industrial enclosure. In order to protect the product from being damaged by ESD (Electrostatic Discharge) and EMI leakage, we strongly recommend the use of CE-compliant industrial enclosure products.

### FCC Class A

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### **Safety Guidelines**

#### Follow these guidelines to ensure general safety:

- Keep the chassis area clear and dust-free during and after installation.
- Do not wear loose clothing or jewelry that could get caught in the chassis. Fasten your tie or scarf and roll up your sleeves.
- Wear safety glasses if you are working under any conditions that might be hazardous to your eyes.
- Do not perform any action that creates a potential hazard to people or makes the equipment unsafe.
- Disconnect all power by turning off the power and unplugging the power cord before installing or removing a chassis or working near power supplies
- Do not work alone if potentially hazardous conditions exist.
- Never assume that power is disconnected from a circuit; always check the circuit.

## About

#### LITHIUM BATTERY CAUTION:

Risk of Explosion if Battery is replaced by an incorrect type. Dispose of used batteries according to the instructions

#### **Operating Safety**

Electrical equipment generates heat. Ambient air temperature may not be adequate to cool equipment to acceptable operating temperatures without adequate circulation. Be sure that the room in which you choose to operate your system has adequate air circulation.

Ensure that the chassis cover is secure. The chassis design allows cooling air to circulate effectively. An open chassis permits air leaks, which may interrupt and redirect the flow of cooling air from internal components.

Electrostatic discharge (ESD) can damage equipment and impair electrical circuitry. ESD damage occurs when electronic components are improperly handled and can result in complete or intermittent failures. Be sure to follow ESD-prevention procedures when removing and replacing components to avoid these problems.

Wear an ESD-preventive wrist strap, ensuring that it makes good skin contact. If no wrist strap is available, ground yourself by touching the metal part of the chassis.

Periodically check the resistance value of the antistatic strap, which should be between 1 and 10 megohms (Mohms).

### **EMC Notice**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case users will be required to correct the interference at their own expense.

Chapter 1: Introduction	1
System Specification       Package Contents         Package Contents       Package Contents         Optional Accessories       Package Contents         Front Panel Features       Package Contents         Rear Panel Features       Package Contents	1 2 3 5
Chapter 2: Hardware Setup	6
Preparing the Hardware Installation.       6         System Memory Installation.       6         Hard Disk Installation       6         CPU and the Heat Sink Installation.       7         Front Ethernet Module Installation       8         Mini PCI Expansion Card Installation       9         CompactFlash Card Installation.       9         IPMI Card Installation       10	6 6 7 8 9 9
Chapter 3: Motherboard Information 11	1
Block Diagram	1 2 3
Chapter 4: BIOS Settings 21	1
Updating the BIOS.2Accessing the BIOS menu.2Navigating the BIOS menu.2The Main Menu.2Advanced Settings.2Chipset.3Boot Setup.3Security Settings.3Save & Exit.3	1 2 3 4 6 8 9
Appendix A: Driver Installation 40	0
LAN Adapters Driver Installation.       .40         On the Windows OS       .40         On Linux       .41         VGA Driver Installation       .42	0 1 2
Appendix B: Setting up Console Redirections 43	3
Appendix C: Programming the LCM 44	4
Appendix D: Programming Generation 2 and 3 LAN Bypass 45	5
Lanner Generation 3 Bypass	5

Lanner Generation 2 Bypass	
Appendix E: Terms and Conditions	47
Warranty Policy	
RMA Service	

## Chapter 1: Introduction

Thank you for choosing the FW-8865. The new system module integrates the newest Intel Xeon Processors, codenamed Sandy Bridge and upgradable to Ivy Bridge, with the Intel C206 Series Chipset. It supports up to 32GB of DDR3 system memory at 1066,1333 or 1600MHz on dual-channel DIMM banks.

The FW-8865 is equipped with advanced I/O capacity which incorporates a serial port, an RJ-45 console port, 2 PCIex8 golden finger connected directly to the CPU for utmost network performance, and 1 PCIex4 mode for PCIe golden finger connector, 4 Serial-ATA ports (two of them comply with SATA Standard 3.0), a ComplactFlash slot, and a Mini-PCI slot, etc.

The board's capability of PCIe bandwidth selection enables it to upgrade dynamically to latter 10 Gbit Ethernet controllers or beyond. The system can add additional 16 LAN ports with 2 Etherent modules, proving a total of 20 LAN ports. Moreover, these LAN modules can be configured with Lanner Generation2 or Generation3 bypass or both depending on the module specification.

Please refer to the chart below for a summary of the system's specifications.

### **System Specification**

Form Factor		1U Rackmount
		2nd generation Intel® Xeon E3-1275, E3-1225, Intel Core i3-2120, G850, G540 on LGA1155
Platform	n Processor Options	3rd generation Intel® Xeon® E3-1275v2, E3-1225v2, Intel Core i3-3220, G2120 on LGA1155
	Chipset	Intel® C206
DIOC		AMI BIOS
RIOZ		64Mbit SPI Flash ROM
System Memory	Technology	DDR3 1066/1333/1600MHz un- buffered, ECC or non-ECC
memory	Max. Capacity	32GB
	Socket	4 X 240P DIMM
OS Support		7. Linux kernel, OpenBSD, FreeBSD
Storago	HDD Bays	1 x 3.5" or 2 x 2.5"
Storage	CompactFlash	1 x Type II CompactFlash
	Ethernet Ports	4 x GbE RJ45 20 GbE ports maximum
	Bypass	2 pairs Generation 3
Networking	Controllers	4 x Intel 82574L or 2 x Intel i350
	Ethernet Modules	2
	Management Port	1 x GbE RJ45
	Security Accelera- tion	N/A
	Reset Button	1 x reset button Software reset by default
	Console	1 x RJ45
I/O Interface	USB	2 x USB 2.0 (or 2 x USB 3.0 with 3rd generation Intel® Xeon)
	IPMI via OPMA slot	Optional
Expansion	PCle	1 x PCI-E *4 expansion
Expansion	PCI	1 x Mini-PCI
Coolina	Processor	CPU heatsink with fan duct
	System	4 x cooling fans with smart fan control
Environmental	lemperature, ambient operating / storage	0 ~ 40° C / -20~70° C
Parameters	Humidity (RH), ambient operating / ambient non- operating	5~95%, non-condensing

### Introduction

	LCD Module	2 x 20 LCM characters	
Miscellaneous	Watchdog	Yes	
miscenaneous	Internal RTC with Li Battery	Yes	
Physical	Dimensions (WxHxD)	431 x 44 x 550 mm	
Dimensions	Weight	12 kg	
	AC: Type/Watts	1U ATX SPS / 270W or 1U	
Power	AC: Input	AC 100~240V @50~60 Hz	
	DC: Type / Watts	1U 250W Redundant	
	DC: Input	-40V~-72VDC, 10-5A	
Approvals and Compliance		CE emission, FCC Class A, RoHS	

### **Package Contents**

Your package contains the following items:

- FW-8865 Network Security Platform
- Power cable
- 1 crossover Ethernet cable (1.8 meters)
- 1 straight-through Ethernet cable (1.8 meters)
- 1 RJ-45 to DB-9 (female) console cable
- Serial-ATA hard drive cable
- 1 threaded screw set
- 1 ear bracket set
- Drivers and user's manual CD.

### **Optional Accessories**

The system has a variety of optional accessories, visit the following website for more information.

http://www.lannerinc.com/x86\_Network\_Appliances/ FW-8865

### **Front Panel Features**



F1 Power/Status/HDD LED

Power: If the LED is on it indicates that the system is powered on. If it is off, it indicates that the system is powered off.

Status: This LED is programmable. You could program it to display the operating status with the following behavior:

If the LED is green, it indicates that the system's operational state is normal. If it is red, it indicates that the system is malfunctioning.

HDD: If the LED blinks, it indicates data access activities; otherwise, it remains off.

F2 LCD System Panel

The LCD System Panel can be programmed to display operating status and configuration information. For more details or sample programming code, please refer to the Drivers and user's manual CD.

F3 Management Port (provided by Realtek RTL8110SC)

This FastEthernet port can be connected for configuration or troubleshooting purpose. A conformity with IPMI (Intelligent Platform Management Interface) can be implemented through OPMA on this interface. Management features include the support of: remote wake-up (including AMD Magic Packet, Re-LinkOk, and Microsoft® Wake-up frame) and Preboot eXecution Environment (PXE) (This feature can be enabled or disable in the BIOS; the default is disabled)..

F4 Console Port

By using suitable rollover cable or RJ-45 to DB-9 console cable, you can connect to a computer terminal for diagnostic or configuration purpose. Terminal Configuration Parameters: 115200 baud, 8 data bits, no parity, 1 stop bit, no flow control.

F5 Two USB 2.0 Ports

It connects to any USB devices, for example, a flash drive. Note that these ports comply with USB 3.0 if the CPU is the 3rd generation Intel<sup>®</sup> Xeon processor.

F7 Reset Switch

The reset switch can be used to reboot the system without turning off the power.

- F6 Swappable Ethernet Modules
- F8 Ethernet Ports (LAN1-LAN2: bypass pair; LAN3-LAN4: bypass pair)

LINK/ACT (Yellow)

- On/Flashing: The port is linking and active in data transmission.
- Off: The port is not linking.

SPEED (Green/Amber)

- Amber: The connection speed is 1000Mbps.
- Green: The connection speed is 100Mbps

• Off: .The connection speed is 10Mbps.

4 on-board Ethernet ports with 2 pairs of LAN bypass. The 4 port lan module is provided by Intel Ethernet 82574L or i350 depending on your model. With Intel i350, it equips with Intel Virtualization for Connectivity (VT-c) as part of the Intel Virtualization Technology to improve networking and I/O throughput on a virtualized system. Moreover, 2 pairs (LAN1-LAN2, LAN3-LAN4) can be configured as LAN Bypass when failure events occur. This feature can be enabled dynamically with a watch dog timer. Refer to your User's Manual CD for a sample implementation of this feature.



In the BIOS,

- 1. M1 denotes expansion Ethernet module No.1 and M2 denotes expansion Ethernet module No.2. For more information on customization of Lanner network modules, visit the Lanner product website at www.lannerinc.com/ x86\_Network\_Appliances/Network\_Modules:
- 2. Left Modu1 denotes the module on the far left when facing the front panel. This module supports both Lanner Generation 2 and Generation 3 bypass.



### **Rear Panel Features**



R1 4 System Fans

These fans have smart fan feature. These fans have smart fan feature which can be turned on automatically when the temperature exceed the set threshold.

- R2 Full-height PCIe Expansion Slot
- R3 Power-on Switch

It is a switch to turn on or off the power.

R4 Power Supply (Redundant PSU is also an option)

The redundant power supply is hot-swappable and can be withdrawn and replaced when the alarm sounds. Note the redundant power supply is only available on some models. See table below for more information.

FW-8865A	4 ports RJ-45 Gigabit (82574L) with LAN Bypass
	function + Single Power Supply
FW-8865B	4 ports RJ-45 Gigabit (1350) with LAN
	Bypass function + Single Power Supply
FW-8865C	4 ports RJ-45 Gigabit (82574L) with LAN Bypass
	function + Redundant Power Supply
FW-8865D	4 ports RJ-45 Gigabit (1350) with LAN
	Bypass function + Redundant Power Supply
FW-8865E	4 ports RJ-45 Gigabit (82574L) without LAN
	Bypass function + Single Power Supply
FW-8865F	4 ports RJ-45 Gigabit (82574L) without LAN
	Bypass function + Redundant Power Supply

R5 Redundant Power Supply Alarm Switch

When the alarm sounds, press this switch to turn the alarm off and replace the failed power. The LED of the failed power supply will be turned off.

## Chapter 2: Hardware Setup

### **Preparing the Hardware Installation**

To access some components and perform certain service procedures, you must perform the following procedures first.



**WARNING:** To reduce the risk of personal injury, electric shock, or damage to the equipment, remove the power cord to remove power from the server. The front panel Power On/Standby button does not completely shut off system power. Portions of the power supply and some internal circuitry remain active until AC power is removed.

- 1. Unpower the FW-8865 and remove the power cord.
- 2. Unscrew the screws (one on each side and one on the rear) from the top cover of the FW-8865 System.
- Slide the cover backwards and open the cover upwards.



### **System Memory Installation**

The motherboard supports DDR3 memory that features data transfer rates of 1066, 1333 or 1600 MHz to meet the higher bandwidth requirements of the latest operating system and Internet applications. To install the memory:

- 1. Open the DIMM slot latches.
- 2. Install the DIMM.



- 1. All DIMMs installed must be the same speed (DDR3 1066,1333 or 1600, unbuffered ECC or non-ECC). Do not install DIMMs supporting different speeds.
- 2. The system can support up to 32 GB in maximum.
- 3. Since the system is capable of Dual Channel Architecture, some installation guidelines have to be met to enable Dual Channel mode as directed. To insert two DIMMs on the system, insert DIMMS on slot J2 (blue) and J4 (blue). And use slot J3 (black) and J5 (black) if more slots are required. (Use slot J3 and then slot J5 in sequence for the additional DIMMS.)

### **Hard Disk Installation**

The system can accommodate two 2.5" or one 3.5" Serial-ATA disks. Follow these steps to install a hard disk into the FW-8865:

- 1. Unscrew the 4 screws on the hard disk tray to take out the hard disk tray from the system.
- 2. Place hard disk on the hard disk tray and align the holes of the hard disk with the mounting holes on the tray.
- 3. Secure the hard disk with 4 mounting screws on the hard disk tray.
- 4. Connect the Serial-ATA power and data disk cables to the hard disk's power and drive connectors respectively.
- 5. Plug the Serial-ATA cable to the Serial-ATA Connector on the main board.
- 6. Repeat steps 2 to 5 to install a second disk (if there is one).
- 7. Put the hard disk tray with the installed hard disk back to the system and secure it with the mounting screws.

### **Hardware Setup**



The 3.5" disk tray also supports 2.5" HDD installation. There are two methods for doing this; refer to the diagram below for instructions.





2.5" HDD installation-Method 1: Side by Side ( screw slots are on the bottom of the tray)



Two 2.5" HDD can be installed

Take out the front plate before connecting the SATA cables



2.5" HDD installation-method 2: Stacked (Reposition the side plate of the tray; the screws are on the bottom)





### **CPU and the Heat Sink Installation**

The FW-8865 sever system is powered by the MB-8865 sever board, which comes with one ZIF type LGA1155 CPU socket.

Follow the procedures bellow for installing a CPU

- 1. Remove the CPU socket cap.
- 2. Press the load lever and release it from the retention tab.
- 3. Lift the load lever and then the plate.
- 4. Align the cut-out of the CPU and the notch on the socket. The CPU should fit perfectly into the socket. Note that the CPU fits in the socket in only one direction.
- 5. Close the plate and push the load lever to lock it back to the retention tab.
- 6. Peel off the sticker on the CPU to expose the thermal compound.
- 7. Put the heat sink on top of the installed CPU, and match

### **Hardware Setup**

the screws with the screw holes on the board. Fasten two screws which are opposite to each other at a time and then the other two. It is easier this way because of the force of the spring.

8. Place the heat sink cover on top of the installed heat sink and screw the three screws to fasten it on the case.



#### Note:

- 1. The CPU heat sink can only be installed in only one orientation as shown in the picture.
- 2. To protect the CPU socket pins, retain the CPU cap when the CPU is not installed.

### **Front Ethernet Module Installation**





- 1. To install the front Ethernet module, take off the front bezel first by unfastening the threaded screws on the bottom of the case.
- 2. Insert the Ethernet module into the front expansion slot. You should hear a click when the module connects to the system's mainboard.
- 3. Fasten the screw back on the bottom of the case to secure the module on the system.

### **Hardware Setup**

### **Mini PCI Expansion Card Installation**





- 1. To install the PCI expansion module, align the PCI notch on the card with the slot key on the socket.
- 2. Insert the PCI card into the slot. Press the card firmly until it is installed securely.

### **CompactFlash Card Installation**

FW-8865 provides one CompactFlash slot. Follow the procedures bellow for installing a CompactFlash card.

- 1. Align CompactFlash card and the card slot with the arrow pointing toward the connector.
- 2. Push the card to insert into the connector.



### **IPMI Card Installation**

FW-8865 provides one OPMA slot for installing the IPMI card. Follow these procedures bellow for installing a CompactFlash card.

- 1. Align the notch of IPMI card with the slot key on the socket.
- 2. Press the card to insert the card into the socket until it snaps with the retaining clips.





## Chapter 3: Motherboard Information

### **Block Diagram**

The block diagram depicts the relationships among the interfaces or modules on the motherboard. Please refer to the following figure for your motherboard's layout design.



### MB-8865B Block Diagram

### **Motherboard Information**

### **Motherboard Layout**

The motherboard layout shows the connectors and jumpers on the board. Refer to the following picture as a reference of the pin assignments and the internal connectors.



### **Motherboard Information**

### **Jumper Settings**

Fan Connectors(FAN1/FAN2/FAN3/FAN4): The 5-pin connector is for connecting the CPU fans. It comes with the smart fan feature by which the fans could be monitored and turned on when the temperature exceed the set threshold. Connect CPU fans to FAN1and FAN3, and connect auxiliary fans to FAN2 and FAN4.

Pin No.	1	2	3	4	5
Function	PWM	NC	FANIN	VFAN	GROUND



FAN4 FAN3 FAN2 FAN1 AUX Fan CPU Fan AUX Fan CPU Fan

Fan Connectors(FAN5): The 3-pin connector is for connecting the chassis fan.

Function	Ground	+12V	AUXFANIN1
PIN NO.	1	2	3

_	3	2	1	
Г			_	
I				
L				

PCIe Connectors(PCIEC4/PCIEC3/PCIEC1/PCIEC2): It is for connecting the expansion cards which might be an Ethernet card or a RAID card. These PCIE sockets offers a variation of PCIe lanes as listed below.

Jumper	Function	
PCIEC1/2	PCI Express x8 SLOT having PCIe x8	
	mode	
PCIEC3	PCI Express x8 SLOT having 2 PCIe x4	
	or 4 PCIe x1 mode	
PCIEC4	PCI Express x8 golden finger having 1	
	PCIE x4 mode	

PCIEx8 Connector running at PCIEx8 mode (PCIEC1,PCIEC2):to be connected to the front Ethernet module. The jumper **J31** can be used to select the PCIe mode of these two connectors and jumper **J32** can be used to select the order of the signal. *Note that with Ivy Bridge CPU, the PCIE also upgrades to PCIe 3.0 standard (currently PCIe 2.0).* 

1		FUNCTION		FUNCTION
	PIN NO.	FUNCTION	PIN NO.	FUNCTION
	BI	+12V	AI	PRSINT I#
	<u>B2</u>	+12V	AZ	+12V
	<u>B3</u>	+12V	A3	+12V
	B4	GND	A4	GND
	B5	SMCLK	A5	JTAG2
	B6	SMDAT	A6	JTAG3
	B7	GND	A7	JTAG4
	B8	+3.3V	A8	JTAG5
	B9	JTAG1	A9	+3.3V
	B10	3.3VAUX	A10	+3.3V
	B11	WAKE#	A11	PERST#
	B12	BYPASS0 Mode	A12	GND
202	B13	GND	A13	REFCLKA+
	B14	CPUPETP7/CPUPETP15	A14	REFCLKA-
	B15	CPUPETN7/CPUPETN15	A15	GND
685-	B16	GND	A16	CPUPERP7/CPUPERP15
	B17	LANM0_LATCH_H	A17	CPUPERN7/CPUPERN15
	B18	GND	A18	GND
	B19	CPUPETP6/CPUPETP14	A19	BYPASS1 Mode
	B20	CPUPETN6/CPUPETN14	A20	GND
	B21	GND	A21	CPUPERP6/CPUPERP14
	B22	GND	A22	CPUPERN6/CPUPERN14
	B23	CPUPETP5/CPUPETP13	A23	GND
	B24	CPUPETN5/CPUPETN13	A24	GND
	B25	GND	A25	CPUPERP5/CPUPERP13
	B26	GND	A26	CPUPERN5/CPUPERN13
	B27	CPUPETP4/CPUPETP12	A27	GND
	B28	CPUPETN4/CPUPETN12	A28	GND
	B29	GND	A29	CPUPERP4/CPUPERP12
	B30	REFCLK1A+	A30	CPUPERN4/CPUPERN12
	B31	REFCLK1A-	A31	GND
	B32	GND	A32	LANM1 LATCH H
	B33	CPUPETP3/CPUPETP11	A33	LANM1 LATCH L
	B34	CPUPETH3/CPUPETH11	A34	GND
	B35	GND	A35	CPUPERP3/CPUPERP11
	B36	GND	A36	CPUPERN3/CPUPERN11
	B37	CPUPETP2/CPUPETP10	A37	GND
	B38	CPUPETN2/CPUPETN10	A38	GND
	B39	GND	A39	CPUPERP2/CPUPERP10
	B40	GND	A40	CPUPERN2/CPUPERN10
	B41	CPUPETP1/CPUPETP9	A41	GND
	 B42	CPUPETN1/CPUPETN9	A42	GND
	B43	GND	A43	CPUPERP1/CPUPERP9
	B44	GND	A44	CPUPERN1/CPUPERN9
	B45	CPUPETPO/CPUPETP8	A45	GND
	B46	CPUPETNO/CPUPETN8	A46	GND
	B47	GND	A47	CPUPERPO/CPUPERP8
	B48		A48	CPUPERNO/CPUPERNR
	B49	GND	A49	GND
	5.5	0.15	1110	0.10

PCIEx8 connector running at 2 PCIEx4 or 4 PCIEx1 mode (PCIEC3): to be connected to the front Ethernet module. It complies with PCIe 2.0 standard.

PIN NO	FUNCTION	PIN NO	FUNCTION
B1	+121/	Δ1	PRSNT1#
B2	+12V	Δ2	+12\/
B3	+12V	A3	+12V
B4	GND	A4	GND
B5	SMCLK	A5	JTAG2
B6	SMDAT	A6	JTAG3
B7	GND	A7	JTAG4
B8	+3.3V	A8	JTAG5
B9	JTAG1	A9	+3.3V
B10	3.3VAUX	A10	+3.3V
B11	WAKE#	A11	PERST#
B12	BYPASS0 Mode	A12	GND
B13	GND	A13	REFCLKA+
B14	EX_CPUPETP3	A14	REFCLKA-
B15	EX_CPUPETN3	A15	GND
B16	GND	A16	EX_CPUPERP3
B17	LANM0_LATCH_H	A17	EX_CPUPERN3
B18	GND	A18	GND
B19	EX_CPUPETP2	A19	BYPASS1 Mode
B20	EX_CPUPETN2	A20	GND
B21	GND	A21	EX_CPUPERP2
B22	GND	A22	EX_CPUPERN2
B23	EX_CPUPETP1	A23	GND
B24	EX_CPUPETN1	A24	GND
B25	GND	A25	EX_CPUPERP1
B26	GND	A26	EX_CPUPERN1
B27	EX_CPUPETP0	A27	GND
B28	EX_CPUPETN0	A28	GND
B29	GND	A29	EX_CPUPERP0
B30	REFCLK1A+	A30	EX_CPUPERN0
B31	REFCLK1A-	A31	GND
B32	GND	A32	LANM1_LATCH_H
B33	SBPETP3	A33	LANM1_LATCH_L
B34	SBPETH3	A34	GND
B35	GND	A35	SBPERP3
B36	GND	A36	SBPERN3
B37	SBPETP2	A37	GND
B38	SBPETN2	A38	GND
B39	GND	A39	SBPERP2
B40	GND	A40	SBPERN2
B41	SBPETP1	A41	GND
B42	SBPETN1	A42	GND
B43	GND	A43	SBPERP1
B44	GND	A44	SBPERN1
B45	SBPETPO	A45	GND
B46	SBPETNO	A46	GND
B47	GND	A47	SBPERPO
B48	LANM0_LATCH_L	A48	SBPERNO
B49	GND	A49	GND

PCIEx8 Golden Finger running at 1 PCIEx4 mode (PCIEC4):to be connected to the PCIe expansion slot on the back panel via a riser card. Note that if this port is connected, some applications of IPMI that requires VGA function such as remote desktop will be disabled.

PIN NO.	FUNCTION	PIN NO.	FUNCTION
B1	+12V	A1	PRSNT1#
B2	+12V	A2	+12V
B3	+12V	A3	+12V
B4	GND	A4	GND
B5	SMCLK	A5	JTAG2
B6	SMDAT	A6	JTAG3
B7	GND	A7	JTAG4
B8	+3.3V	A8	JTAG5
B9	JTAG1	A9	+3.3V
B10	3.3VAUX	A10	+3.3V
B11	WAKE#	A11	PERST#
B12	RESV	A12	GND
B13	GND	A13	REFCLKA+
B14	RESV	A14	REFCLKA-
B15	RESV	A15	GND
B16	GND	A16	RESV
B17	RESV	A17	RESV
B18	GND	A18	GND
B19	RESV	A19	RESV
B20	RESV	A20	GND
B21	GND	A21	RESV
B22	GND	A22	RESV
B23	RESV	A23	GND
B24	RESV	A24	GND
B25	GND	A25	RESV
B26	GND	A26	RESV
B27	RESV	A27	GND
B28	RESV	A28	GND
B29	GND	A29	RESV
B30	RESV	A30	RESV
B31	RESV	A31	GND
B32	GND	A32	RESV
B33	SBPETP4	A33	RESV
B34	SBPETH4	A34	GND
B35	GND	A35	SBPERP4
B36	GND	A36	SBPERN4
B37	SBPETP5	A37	GND
B38	BPETN5	A38	GND
B39	GND	A39	SBPERP5
B40	GND	A40	SBPERN5
B41	SBPETP6	A41	GND
B42	SBPETN6	A42	GND
B43	GND	A43	SBPERP6
B44	GND	A44	SBPERN6
B45	SBPETP7	A45	GND
B46	SBPETN7	A46	GND
B47	GND	A47	SBPERP7
B48	RESV	A48	SBPERN7
B49	GND	A49	GND

### **Motherboard Information**

Mini-PCI Connector (PCIB1): The Mini-PCI slot enables a Mini-PCI expansion module to be connected to the board.



PIN NO.	FUNCTION	PIN NO.	FUNCTION
1	TIP	2	RING
3	8PMJ-3	4	8PMJ-1
5	8PMJ-6	6	8PMJ-2
7	8PMJ-7	8	8PMJ-4
9	8PMJ-8	10	8PMJ-5
11	LED1 GRNP	12	LED2 YELP
13	LED1 GRNN	14	LED2 YELP
15	CHSGND	16	RESERVED
17	INT-B	18	+5V
19	+3.3V	20	INT-A
21	RESERVED	22	RESERVED
23	GROUND	24	3.3VAUX
25	CLK	26	RST
27	GROUND	28	+3.3V
29	REO	30	GNT
31	+3 31/	32	GROUND
33	 	3/	PMF
35		36	
37		38	
30		40	13.3/
<u> </u>	AD27	40	ΔD28
41		42	AD20
45	C BE-3	44	AD20
45		40	
/9	GROUND	50	GROUND
51		52	
53	ΔD19	54	
55	GROUND	56	PAR
57		58	
59	C BF-2	60	AD16
61		62	GROUND
63	+3 3\/	64	FRAME
65		66	
67	SERR	68	STOP
69	GROUND	70	+3.31/
71	PERR	70	DEVSEI
73	C BF-1	74	GROUND
75		74	
77		78	
79		80	
81	AD10	82	GROUND
83	GROUND	8/	
85		86 86	
87		22	T3 3/\
20/ 20	, 2 2\/	00	AD6
Q1		07	
03		92	
95		06	
95		90 QQ	
	+JV	50	

111	MOD_AUDIO_ MON	112	RESERVED
113	AUDIO_GND	114	GROUND
115	SYS_AUDIO_OUT	116	SYS_AUDIO_IN
117	SYS_AUDIO_OUT GND118	118	SYS_AUDIO_IN GND
119	AUDIO_GND	120	AUDIO_GND
121	RESERVED	122	MPCIACT
123	+5V	124	+3.3 STBY

ATX Power Connector(ATX1, ATX2): These 24-pin and 8-pin connectors are for connecting ATX power supply plugs. Find the proper orientation when inserting the plugs, for the supply plugs are designed to fit these connectors in only one orientation.

1 (	2 Iov	3 ve	4 r)	
	6	7	2	
()	up	pe:	r)	

Pin No.	Function
1	GND
2	GND
3	GND
4	GND
5	+12V
6	+12V
7	+12V
8	+12V

23		24	Pin No.	Function	Pin NO.	Function
21		22	1	+3.3V	2	+3.3V
19		20	3	+3.3V	4	-12V
17		18	5	GROUND	6	GOUND
15		16	7	+5V	8	PSON-
13		14	9	GROUND	10	GROUND
11		12	11	+5V	12	GROUND
9		10	13	GROUND	14	GROUND
7		8	15	POWER GOOD	16	NC
5		6	17	STAND-BY 5V	18	+5V
3		4	19	+12V	20	+5V
1		2	21	+12V	22	+5V
'		-	23	+3.3V	24	GROUND

AT Mode Power Button Connector (J15): It is for connecting the power switch in AT mode

1	Pin No.	Function
12	1	PS_ON#
	2	GND

AT Mode Jumper(J17): It is for adjusting the jumper setting for the system power to be in ATX mode if AT Mode Power Button Connector (J15) is used.

<b>1</b>	Pin No.	Function
2		Normal (Default ATX Mode)
	1-2	AT mode



### **Motherboard Information**

Clear CMOS jumper (J8): It is for clearing the CMOS memory and system setup parameters by erasing the data stored in the CMOS RAM such as the system passwords.

1 7 7	Pin No.	Function
	1-2 (Default)	Normal
	2-3	Clear CMOS

CompactFlash Connector (CF1): It is for connecting a Compact Flash card to be served as your system's storage. The connector is a CF Type II slot which could fit both CF Type I or CF Type II cards.



Pin No.	Function	Pin No.	Function
1	Ground	2	Data 3
3	Data 4	4	Data 5
5	Data 6	6	Data 7
7	CE1#	8	N.C.
9	Ground	10	N.C.
11	N.C.	12	N.C.
13	+3.3V	14	N.C.
15	N.C.	16	N.C.
17	N.C.	18	Addr 2
19	Addr 1	20	Addr 0
21	Data 0	22	Data 1
23	Data 2	24	WP
25	CD2-	26	CD1-
27	Data 11	28	Data 12
29	Data 13	30	Data 14
31	Data 15	32	CE2#
33	N.C.	34	IOR#
35	IOW#	36	WE#
37	READY#	38	+3.3V
39	CSEL.	40	N.C.
41	RESET	42	WAIT#
43	INPACK#	44	REG#
45	DASP#	46	DIAG#
47	Data 8	48	Data 9
49	Data 10	50	Ground

- DIMM Socket (J2/J3/J4/J5): The 240-pin DDR3 DIMM is for connecting the DDR3 1066/1333/1600 (unbuffered ECC or non-ECC) memory. The system can support up to32 GB in maximum. A DDR3 module has the same physical dimensions as a DDR2 DIMM but the notch on the pins is positioned differently. Channel information lists below:
  - J2 Channel A DIMM0 (blue)
  - J3 Channel A DIMM1 (black)
  - J4 Channel B DIMM0 (blue)
  - J5 Channel B DIMM1 (black)
  - **Note:** Since the system is capable of Dual Channel Architecture, some installation guidelines have to be met to enable Dual Channel mode as directed. To insert two DIMMs on the system, insert DIMMS on slot J2 (blue) and J4 (blue). And use slot J3 (black) and J5 (black) if more slots are required. (Use slot J3 and then slot J5 in sequence for the additional DIMMS.)
- SATA 1, 2 and 3, 4 Connectors (SATA1/SATA2/SATA3/ SATA4): It is for connecting a 2.5" SATA harddisk to be served as your system's storage. The system can accommodate up to 2 disks (2.5" or 1disk for 3.5") in maximum. **SATA1** and **SATA2** comply fully with *SATA Revision 3.0* standard with data transfer rates of up to 6.0 Gb/s. **SATA 3** and **SATA4** support *SATAT revision 2.0*. The controller contains two modes of operation—a legacy mode using I/O space, and an AHCI mode using memory space. Software that uses legacy mode will not have AHCI capabilities.

The AHCI (Advanced Host Controller Interface) is a programming interface which defines transactions between the SATA controller and software and enables advanced performance and usability with SATA. Platforms supporting AHCI may take advantage of performance features such as no master/slave designation for SATA devices—each device is treated as a master—and hardware assisted native command queuing. AHCI also provides usability enhancements such as Hot-Plug. Note you will need to configure your SATA as AHCI or RAID in the BIOS.



### Note:

- To configure your Hard disk using the integrated RAID feature, the Intel®Rapid Storage Technology Utility has to be installed on your Operating System.
- 2. You will need to select the RAID mode in the

### **Motherboard Information**

BIOS for your SATA drives first. There is also a Intel® RSTe OpROM utility for creating RAID volume; to enter the RSTe OpROM, press Ctrl-I during POST.

3. For operating systems other than Microsoft® Windows Vista and Windows® 7, it is required to pre-install the Intel Rapid Storage Technology driver during the F6 installation of Windows setup ("press F6 if you need to install a third party SCSI or RAID driver....").

Visit the Intel support page at http://www.intel. com/p/en\_US/support/highlights/chpsts/imsm for more information and download links.

The Intel controller hubs are also supported 4. by Linux. Beginning with Linux kernel version 2.6.27, the mdadm utility 3.0 supports RAID 0, RAID 1, RAID 5, and RAID 10.

To use the RAID features in dmraid and mdadm, you will need to set up the RAID volume using the Intel® Matrix Storage Manager option ROM (click CTRL + I when prompted during boot to enter the option ROM user interface).

Power-switch Connector (SW1, CONN1): A tact as well as the connector for switch button used for turning on or off the power once the power supply is applied to the board.



USB Connector(USBA1&USBA2) : It is for connecting the USB module cable. It complies with USB2.0 and support up to 480 Mbps connection speed.



Pin No.	Function	Pin No.	Function
1	USB_VCC0	2	USB_VCC1
3	USBD0-	4	USBD1-
5	USBD0+	6	USBD1+
7	USB Port Ground	8	USB Port Ground
9	USB Port Ground	10	USB Port Ground

LED Signals on RJ45 port of the PCI-e Expansion Card : A LED connector showing the LEDs of the RJ45 ports



Pin No.	Function	Pin No.	Function
1	LED_SPEED_100	2	NC
3	LED_SPEED_1G	4	NC
5	LINK/ACT	6	NC
7	P3V3_DUAL	8	P3V3_DUAL
9	Ground	10	Ground

LPC I/O bus (It can also be called Port 80) (LPC1): It is a proprietary connector for connecting a checkpoint device to output checkpoints throughout booting and Power-On Self Test (POST) to indicate the task the system is currently executing.

	Pin No.	Function	Pin No.	Function
97531	1	CLK_33M_P80	2	LPC_LAD1
	3	RST_80DGPT_N	4	LPC_LAD0
	5	LPC_FRAME_N	6	+3.3V
10 8 6 4 2	7	LPC_LAD3	8	Ground
	9	LPC_LAD2	10	Ground

#### Front LCD Module Connector(J14): The 24-pin connector is for connecting the front system panel.

~ 1	_					
24		23	PIN NO.	Function	Pin No.	Function
	Π		1	+5V	2	Ground
	Π	Т	3	LSLIN#	4	VEE
	Π		5	LAFD#	6	LINIT#
	Π		7	FL_PD1	8	FL_PD0
	Π		9	FL_PD3	10	FL_PD2
	Π	1	11	FL_PD5	12	FL_PD4
	H	-	13	FL_PD7	14	FL_PD6
	Н	-	15	LCD-	16	+5V
	Н	-	17	KPA1	18	KPA2
			19	KPA3	20	KPA4
	Π		21	LCM_RST	22	CTR-GRN
2	Ħ	1	23	CTR-YEW	24	HDLED_N

Keyboard and Mouse Interface Cable Connectors (J10): It is for connecting the PS/2 keyboard and mouse interface cable.

2	4	6	8	
Ļ	3	5	Ļ	

Pin No.	Function	Pin No.	Function
1	P5V	2	MSCLK
3	MSDATA	4	KEY
5	KBDATA	6	KEY
7	GND	8	KBCLK

### **Motherboard Information**

Hardware or Software Reset Jumper(J13): The jumper can be adjusted to be in either hardware or software reset mode when the reset switch is pressed. The hardware reset will reboot the system without turning off the power. The software reset can be programmed to reset a software to its default setting.

3 2 1	Pin No.	Function
	1-2	Hardware Reset
	2-3	Software Reset

Power Failure Detection Jumper (TTL1/TTL2): This twopin jumper can be used for power failure detection. Connect the redundant power 1 and redundant power 2 to TTL1 and TTL2 respectively in order to monitor the availability of them.



Serial Interface Connectors(COMB1/COMB2): It is for connecting the RS-232 serial port interface cable.



Pin NO.	Function	PIN NO.	
1	Data Carrier Detect (DCDB#)	2	Data Set Ready (DSRB#)
3	Receive Data (RXDB)	4	Request To Send (RTSB#)
5	Transmit Data (TXDB)	6	Clear To Send (CTSB#)
7	Data Terminal Ready (DTRB #)r	8	Ring Indicator (RIB #)
9	Ground	10	Key

- OPMA Slot (OPMA1): This is an optional OPMA (Open Platform Management Architecture ) slot on the board. Through this card, the IPMI (Intelligent Platform Management Interface) implementation can be realized. Note that if the PCIe expansion golden finger-PCIEC4 is connected, some applications of IPMI that requires VGA function such as remote desktop will be disabled.
- Management Port (MGT1, provided by Realtek RTL8110SC): The management port provides connects to the front management port. It can be an IPMI compliant management with the OPMA card; otherwise, it is just a normal management port.

Pin No.	Function (10/100)	PIN NO.(10/100/1000)		
1	TX+	MD0+		
2	TX-	MD0-		
3	RX+	MD1+		
4	T45	MD2+		
5	T45	MD2-		
6	RX-	MD1-		
7	T78	MD3+		
8	T78	MD3-		
9	LINK_1000_N			
10	LINK_100_N			
11	LINK/ACT_N			
12	PULLHIGH			

Power-switch Connector (SW2): A tact for rebooting the system.

Pin No. Pin name 1 GND
1 GND
Z GND
3 RESET#
4 RESET#

### **Motherboard Information**

SPI-ROM Update Connector (SPI-ROM1): Using the appropriate cable to connect this 10-pin ISP in header connector, the user can update the SPI Flash soldered on board.

on
UII
CS1_N
_SPI
D0_L
CLK_R
AOSI_R

VGA Interface (VGAA1): It is for connecting the VGA interface cable (2X6 pin to female DB15 connector)



Pin No.	Function	PIN NO.	Function
1	R	2	Ground
3	G	4	Ground
5	В	6	Ground
7	H-SYNC	8	NC
9	9 V-SYNC		Ground
11	Detect-display Data	12	Deteck-display CLOCK

#### USB and COM Interface signal for LCM card (J29)

10		9	Pin No.	Function	PIN NO.	Function
0		7	1	P5V_DUAL	2	P5V
0		/	3	USB-	4	NC
6		5	5	USB+	6	HDD_LED-
4		3	7	GND	8	GND
2		1	9	NXP_TXD	10	NXP_RXD
		· ·				

#### Pin Header for Power Management Port (J28)

1	Pin No.	Function
	1	PSUMAN_SMBCLK
	2	NC
	3	GND
	4	PSUMAN_SMBDATA
	5	P5V
l '		

Case Open Signal (CONN2)



PCIe mode selection for PCIe expansion integrated directly into the CPU (PCIEC1 and CPIEC2):J31

.	Pin No.	Function
1	1-2	CPU PCIE divide to
2		X8,X4,X4
3	2-3	CPU PCIE divide to 2 PCIEx8 (default)

PCIe signal order selection (J32): PCIe signal order selection for PCIe expansion integrated directly into the CPU: PCIEC1, PCIEC2, and PCIEC3

#### PCIEC1/PCIEC2

1	Pin No.	Function
2	1-2	The PCIE signal in reverse order (default)
3	2-3	The PCIE signal in positive order

PIN NO.	FUNCTION	PIN NO.	FUNCTION
B1	+12V	A1	PRSNT1#
B2	+12V	A2	+12V
B3	+12V	A3	+12V
B4	GND	A4	GND
B5	SMCLK	A5	JTAG2
B6	SMDAT	A6	JTAG3
B7	GND	A7	JTAG4
B8	+3.3V	A8	JTAG5
B9	JTAG1	A9	+3.3V
B10	3.3VAUX	A10	+3.3V
B11	WAKE#	A11	PERST#
B12	BYPASS0 Mode	A12	GND
B13	GND	A13	REFCLKA+
B14	CPUPETP0/CPUPETP8	A14	REFCLKA-
B15	CPUPETN0/CPUPETN8	A15	GND
B16	GND	A16	CPUPERP0/CPUPERP8
B17	LANM0_LATCH_H	A17	CPUPERNO/CPUPERN8
B18	GND	A18	GND
B19	CPUPETP1/CPUPETP9	A19	BYPASS1 Mode
B20	CPUPETN1/CPUPETN9	A20	GND
B21	GND	A21	CPUPERP1/CPUPERP9
B22	GND	A22	CPUPERN1/CPUPERN9
B23	CPUPETP2/CPUPETP10	A23	GND
B24	CPUPETN2/CPUPETN10	A24	GND
B25	GND	A25	CPUPERP2/CPUPERP10
B26	GND	A26	CPUPERN2/CPUPERN10
B27	CPUPETP3/CPUPETP11	A27	GND
B28	CPUPETN3/CPUPETN11	A28	GND
B29	GND	A29	CPUPERP3/CPUPERP11
B30	REFCLK1A+	A30	CPUPERN3/CPUPERN11
B31	REFCLK1A-	A31	GND
B32	GND	A32	LANM1_LATCH_H
B33	CPUPETP4/CPUPETP12	A33	LANM1_LATCH_L
B34	CPUPETH4/CPUPETH12	A34	GND
B35	GND	A35	CPUPERP4/CPUPERP12
B36	GND	A36	CPUPERN4/CPUPERN12
B37	CPUPETP5/CPUPETP13	A37	GND
B38	CPUPETN5/CPUPETN13	A38	GND
B39	GND	A39	CPUPERP5/CPUPERP13
B40	GND	A40	CPUPERN5/CPUPERN13
B41	CPUPETP6/CPUPETP14	A41	GND
B42	CPUPETN6/CPUPETN14	A42	GND
B43	GND	A43	CPUPERP6/CPUPERP14
B44	GND	A44	CPUPERN6/CPUPERN14
B45	CPUPETP7/CPUPETP15	A45	GND
B46	CPUPETN7/CPUPETN15	A46	GND
B47	GND	A47	CPUPERP7/CPUPERP15
B48	LANM0_LATCH_L	A48	CPUPERN7/CPUPERN15
B49	GND	A49	GND

## **Motherboard Information**

### PCIEC3

PIN NO.	FUNCTION	PIN NO.	FUNCTION
B1	+12V	A1	PRSNT1#
B2	+12V	A2	+12V
B3	+12V	A3	+12V
B4	GND	A4	GND
B5	SMCLK	A5	JTAG2
B6	SMDAT	A6	JTAG3
B7	GND	A7	JTAG4
B8	+3.3V	A8	JTAG5
B9	JTAG1	A9	+3.3V
B10	3.3VAUX	A10	+3.3V
B11	WAKE#	A11	PERST#
B12	BYPASS0 Mode	A12	GND
B13	GND	A13	REFCLKA+
B14	EX_CPUPETP0	A14	REFCLKA-
B15	EX CPUPETNO	A15	GND
B16	GND	A16	EX CPUPERPO
B17	LANM0_LATCH_H	A17	EX_CPUPERN0
B18	GND	A18	GND
B19	EX CPUPETP1	A19	BYPASS1 Mode
B20	EX_CPUPETN1	A20	GND
B21	GND	A21	EX_CPUPERP1
B22	GND	A22	EX CPUPERN1
B23	EX_CPUPETP2	A23	GND
B24	EX_CPUPETN2	A24	GND
B25	GND	A25	EX_CPUPERP2
B26	GND	A26	EX_CPUPERN2
B27	EX_CPUPETP3	A27	GND
B28	EX_CPUPETN3	A28	GND
B29	GND	A29	EX_CPUPERP3
B30	REFCLK1A+	A30	EX_CPUPERN3
B31	REFCLK1A-	A31	GND
B32	GND	A32	LANM1_LATCH_H
B33	SBPETP3	A33	LANM1_LATCH_L
B34	SBPETH3	A34	GND
B35	GND	A35	SBPERP3
B36	GND	A36	SBPERN3
B37	SBPETP2	A37	GND
B38	SBPETN2	A38	GND
B39	GND	A39	SBPERP2
B40	GND	A40	SBPERN2
B41	SBPETP1	A41	GND
B42	SBPETN1	A42	GND
B43	GND	A43	SBPERP1
B44	GND	A44	SBPERN1
B45	SBPETPO	A45	GND
B46	SBPETNO	A46	GND
B47	GND	A47	SBPERPO
B48	LANM0_LATCH_L	A48	SBPERNO
B49	GND	A49	GND

## Chapter 4: BIOS Settings

### **Updating the BIOS**

The Basic Input/Output System (BIOS) can be updated using the designated Flash Utility. To obtain the utility, please contact us either through the sales rep or technical support.



#### Note:

For the update version of the BIOS image, please visit Lanner's support page at

http://assist.lannerinc.com. Then select *support center* from the Main Menu and look under the folder for the desired product category. The resources for each product including the BIOS image will be contained within a folder named by the product model.

## **Bios Settings**

### **Accessing the BIOS menu**

When you are installing a motherboard or when the system prompts "Run Setup" during start-up, you will use the BIOS Setup program to configure the system, . This section explains how to configure your system using this program.

Even if you are not prompted to enter the BIOS Setup program when you are installing a motherboard, you can still change the configuration of your computer later on with this program. For example, you may want to enable the security password feature or change the power management settings. This requires you to reconfigure your system by using the BIOS Setup program so that the computer can recognize these changes and record them in the CMOS RAM.

When you start up the computer, the system provides you with the opportunity to run this program. Press <Delete> during the Power-On-Self-Test (POST) to enter the Setup utility (There are a few cases that other keys may be used, such as <F1>, <F2>, and so forth.); otherwise, POST continues with its test routines.

If you wish to enter Setup after POST, restart the system by pressing <Ctrl+Alt+Delete>, or by pressing the reset button on the system chassis. You can also restart by turning the system off and then back on. Do this last option only if the first two failed.

The Setup program is designed to make it as easy to use as possible. Being a menu-driven program, it lets you scroll through the various sub-menus and make your selections from the available options using the navigation keys.



Note: This manual describes the standard look of the setup screen. There may be some instances in which the motherboard features can vary from one to another due to customization. This means that some of the options described in this manual mays not match that of your motherboard's AMIBIOS.

### **Navigating the BIOS menu**

The BIOS setup utility uses a key-based navigation system called hot keys. Most of the BIOS setup utility hot keys can be used at any time during the setup navigation process.

These keys include <F1>, <F10>, <Enter>, <ESC>, <Arrow> keys, and so on.

Aptio Setup Utility Main Advanced Chipse	y <mark>– Copyright (C) 2011 Ameri</mark> et Boot Security Save & E	can Megatrends, Inc. Xit
BIOS Information		Choose the system
BIOS Vendor	American Megatrends	default language
Core Version	4.6.5.3	
Compliancy	UEFI 2.3; PI 1.2	
Project Version	1APUY 0.15 ×64	
Build Date and Time	09/07/2012 14:12:19	
Processor Information		
Name	IvyBridge	
Brand String	Intel(R) Xeon(R) CPU	
Frequency	3500 MHz	++: Select Screen
Processor ID	306a8	↑↓: Select Item
Stepping	E0/L0	Enter: Select
Number of Processors	4Core(s) / 8Thread(s)	+/-: Change Opt.
Microcode Revision	10	F1: General Help
GT Info	GT2 (1250 MHz)	F2: Previous Values
		F3: Optimized Defaults
IGFX VBIOS Version	2137	F4: Save & Exit
Memory RC Version	1.6.0.0	ESC: Exit
Version 2 14 1219	Copuright (C) 2011 America	n Megatrends Inc

Keys	Description	
-><- Left/Right	The Left and Right <arrow> keys</arrow>	
.∧. \'	allow you to select an setup screen.	
	For example: Main screen, Advanced	
	screen, Boot screen, and so on.	
Up/Down	The Up and Down <arrow> keys</arrow>	
	allow you to select an setup item or	
	sub-screen.	
+- Plus/Minuss	The Plus and Minus <arrow> keys</arrow>	
	allow you to change the field value	
	of a particular setup item. For	
	example: Date and Time.	
Tab	The <tab> key allows you to select</tab>	
	setup fields.	



Note: The <F8> key on your keyboard is the Fail-Safe key. It is not displayed on the key legend by default. To set the Fail-Safe settings of the BIOS, press the <F8> key on your keyboard. The Fail-Safe settings allow the motherboard to boot up with the least amount of options set. This can lessen the probability of conflicting settings.

### **Bios Settings**

### The Main Menu

The main BIOS setup menu is the first screen that you can navigate. Each main BIOS setup menu option is described in this chapter.

The Main BIOS setup menu screen has two main frames. The left frame displays all the options that can be configured. "Grayed-out" options are configured parameters and cannot be modified. On the other hand, Options in blue can be modified.

The right frame displays the key legend. Above the key legend is an area reserved for a text message. When an option is selected in the left frame, it is highlighted in white. Often a text message will accompany it.

Aptio Setup Utility – Copyright (C) 2011 American Megatrends, Inc. Main Advanced Chipset Boot Security Save & Exit			
BIOS Information BIOS Vendor Core Version Compliancy Project Version Build Date and Time	American Megatrends 4.6.5.3 UEFI 2.3; PI 1.2 1APUY 0.15 X64 09/07/2012 14:12:19	Choose the system default language	
Processor Information Name Brand String Frequency Processor ID Stepping Number of Processors Microcode Revision GT Info IGFX VBIOS Version Memory RC Version	IvyBridge Intel(R) Xeon(R) CPU 3500 MHz 306a8 EO/L0 4Core(s) / 8Thread(s) 10 GT2 (1250 MHz) 2137 1.6.0.0	++: Select Screen 14: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	

#### System Language

Use this item to choose the BIOS language.

#### System Time/System Date

Use this option to change the system time and date. Highlight System Time or System Date using the <Arrow> keys. Enter new values through the keyboard. Press the <Tab> key or the <Arrow> keys to move between fields. The date must be entered in MM/DD/YY format. The time is entered in HH:MM:SS format.

Aptio Setup Utility – Copyright (C) 2011 American Megatrends, Inc. Main Advanced Chipset Boot Security Save & Exit			
Total Memory Memory Frequency	4096 MB (DDR3) 1333 Mhz	Choose the system default language	
PCH Information Name Stepping LAN PHY Revision	CougarPoint 05/B3 N/A		
ME FW Version ME Firmware SKU	8.0.13.1502 1.5MB		
SPI Clock Frequency DOFR Support Read Status Clock Fre Write Status Clock Fr Fast Read Status Cloc	Unsupported 33 MHz 33 MHz 33 MHz	H: Select Scheen H: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults	
System Language	[English]	F4: Save & Exit ESC: Exit	

Aptio Setup Utility Main Advanced Chipse	y <mark>– Copyright (C) 2011 Amer</mark> et Boot Security Save &∣	ican Megatrends, Inc. Exit
LAN PHY Revision	N/A	
ME FW Version ME Firmware SKU	8.0.13.1502 1.5MB	
SPI Clock Frequency DOFR Support Read Status Clock Fre	Unsupported 33 MHz	
Fast Read Status Clock Pr	33 MHz	
System Language	[English]	†∔: Select Item Enter: Select
System Date	[Thu 01/01/2009]	+/-: Change Opt.
System Time	[21:41:13]	F1: General Help F2: Previous Values
Access Level	User	F3: Optimized Defaults
Access Level	Administrator	F4: Save & Exit ▼ESC: Exit
Version 2.14.1219.	Copyright (C) 2011 Americ	an Megatrends, Inc.

### **Bios Settings**

### **Advanced Settings**

Select the Advanced tab from the setup screen to enter the Advanced BIOS Setup screen. You can select any of the items in the left frame of the screen, such as SuperIO Configuration, to go to the sub menu for that item. You can display an Advanced BIOS

Setup option by highlighting it using the <Arrow> keys. All Advanced BIOS Setup options are described in this section. The Advanced BIOS Setup screen is shown at the right. The sub menus are described on the following pages.

Aptio Setup Ut Main Advanced C	ility – Copyright (C) 20 nipset Boot Security	011 American Megatrends, Inc. Save & Exit
PXE Function	[Disabled]	PXE Function
<ul> <li>CPU Configuration</li> <li>SATA Configuration</li> <li>USB Configuration</li> <li>Super IO Configura</li> <li>H/W Monitor</li> <li>Serial Port Consol</li> <li>LAN bupass Configurat</li> <li>CPU PPM Configurat</li> </ul>	tion e Redirection ation ion	++: Select Screen 11: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Version 2.14.	1219. Copyright (C) 201:	1 American Megatrends, Inc.

#### PXE Function (featuring on the management port)

The Preboot eXecution Environment (PXE) allows you to boot computers using a network interface independently of data storage devices (like hard disks) or installed operating systems. Enable or disable this function on the **management port** with this option here.



#### **CPU Configuration Settings**

You can use this screen to view the capabilities and of your CPU. You can also use this menu to enable/disable certain functions of your CPU. Use the up and down <Arrow> keys to select an item. Use the <Plus> and <Minus> keys to change the value of the selected option. A description of the selected item appears on the right side of the screen. The settings are described below.

ltem	Selection
Intel Hyper-	The Intel Hyper-Threading Technology
Threading	allows a hyper-threading processor to
_	appear as two logical processors to the
	operating system, allowing the operat-
	ing system to schedule two threads or
	processes simultaneously.
	Select to enable or disable this feature.
Active Pro-	Select the number of processor cores to
cessor Core	be active in each processor package.



## **Bios Settings**

ltem	Selection
Limit CPUID	Allows legacy operating systems to boot
Maximum	even without support CPUs with extend-
	ed CPUID functions.
	Select to enable or disable this function
Execute Dis-	Select to enable or disable the No-Execu-
able Bit	tion Page Protection Technology.
Intel Virtual-	The Intel VT is a hardware-assisted virtual-
ization	ization. This processor supports Intel Vir-
	tualization. Enable or disable this feature.
Hardware	The processor has a hardware prefetcher
Prefetcher	that automatically prefetches data and in-
	structions from the memory into the Level
	2 cache that are likely to be required in
	the near future. This reduces the latency
	associated with memory reads.
	When enabled, the processor's hardware
	prefetcher will be enabled and allowed to
	automatically prefetch data and code for
	the processor.
	When disabled, the processor's hardware
	prefetcher will be disabled.
Adjacent	Select to enable or disable prefetching of
Cache Line P	adiacent line



#### **SATA Controllers Configuration Settings**

While entering Setup, the BIOS automatically detects the presence of SATA devices. The SATA Port items show "Empty" if no SATA device is installed to the corresponding SATA port.

#### **SATA Controllers**

ltem	Selection	
Enable or	Set this value to enable or disable SATA	
Disable SATA	controllers	
Controller(s)		



## **Bios Settings**

#### **SATA Mode Selection**

The system supports advanced SATA features such as software RAID.

ltem	Selection		
IDE Mode	Set to IDE mode when your want to use the		
	Serial-ATA hard disk drives as Parallel ATA physical		
	storage devices.		
AHCI Mode	Set to AHCI mode when you want the SATA		
	hard disk drives to use the AHCI (Advanced		
	Host Controller Interface). The AHCI allows the		
	onboard storage driver to enable advanced SATA		
	features that increases storage performance or		
	workloads where multiple simultaneous read/		
	write requests are outstanding, most often		
	occurring in server-type applications (native		
	command queuing). It also facilitates hot		
	swapping.		
RAID	Set to the RAID mode when you want to create		
	a RAID configuration from the SATA Hard disk		
	drives. Thie chipset supports software RAID by		
	using the Intel® Matrix Storage Manager		
	software. For more information, visit		
	http://www.intel.com/design/chipsets/		
	matrixstorage_sb.htm#benefit		



#### Serial ATA Port 0/1/2/3

Use this menu to configure specific SATA Port for all ports on the system.

Option	Description	
Software	In order to avoid losing important software	
Preserve	settings without legacy driver knowledge, the	
	software settings preservation ensures that	
	the value of important software settings is	
	maintained across a COMRESET	
Port 0	Enable or disable the specific port	
Hot Plug	The AHCI of SATA provides hot plug capability	
	to allow drives to be added or removed with the	
	PC running.	
External	Called external SATA or eSATA, you can now	
SATA	utilize shielded cable lengths up to 2 meters	
	outside the PC to transform SATA to be an	
	external storage. enable or disable this feature.	
SATA Device	Select the SATA type from either Hard Disk Drive	
type	or Solid State Drive	
Spin Up	Spin-up is a simple mechanism by which the	
Device	storage subsystem controller can sequence	
	hard disk drive initialization and spin-up.set to	
	control whether each specific drive will spin up.	



### **Bios Settings**

#### **USB Configuration Setting**

You can use this screen to select options for the USB Configuration. Use the up and down <Arrow> keys to select an item. Use the <Plus> and <Minus> keys to change the value of the selected option. The settings are described on the following pages.

#### Legacy USB Support

This option enable or disable the support for USB devices on legacy operating systems (OS), e.g., Windows ME/98/ NT, and MS-DOS. Normally if this option is not enabled, any attached USB mouse or USB keyboard will not become available until a USB compatible operating system is fully booted with all USB drivers loaded. When this option is enabled, any attached USB mouse or USB keyboard can be used on the system even when there is no USB drivers loaded on it.

Option	Description
Auto	Allow the system to detect the presence of USB
	devices at startup. If detected, the USB controller
	legacy mode is enabled If it is not detected, the
	USB control er legacy mode is disabled.
Enabled	Enable the support for USB devices on legacy
	operating system
Disabled	Disable this function.

USB Configuration		Enables Legacy USB
USP Devices:		support. AUTO option
1 Drive, 2 Hubs		if no USB devices are
Legacy USB Support		option will keep USB
EHCI Hand-off	[Disabled]	devices available only for EFI applications.
USB hardware delays a		
USB transfer time-out	[20 sec]	
Device reset time-out	[20 sec]	++: Select Screen
Device power-up delay	[Auto]	I↓: Select Item
Mass Storage Devices:		+/-: Change Ont.
JetFlashTranscend 1GB	[Auto]	F1: General Help
		F2: Previous Values
		F3: Optimized Defaults
		F4: Save & Exit
Version 2.14.1219. Aptio Setup Utilit Advanced	. Copyright (C) 2011 Ameri y — Copyright (C) 2011 Ame	ESC: Exit Ican Megatrends, Inc. erican Megatrends, Inc.
Version 2.14.1219. Aptio Setup Utilit Advanced	. Copyright (C) 2011 Ameri y – Copyright (C) 2011 Ame	ESC: Exit
Version 2.14.1219. Aptio Setup Utilit Advanced USB Configuration	. Copyright (C) 2011 Ameri y — Copyright (C) 2011 Ame	ESC: Exit can Megatrends, Inc. erican Megatrends, Inc. Enables Legacy USB supportAUTD_pation
Version 2.14.1219. Aptio Setup Utilit Advanced USB Configuration USB Devices:	. Copyright (C) 2011 Ameri y – Copyright (C) 2011 Ame	ESC: Exit Lean Megatrends, Inc. erican Megatrends, Inc. Enables Legacy USB support. AUTO option disables legacy suppor
Version 2.14.1219. Aptio Setup Utilit Advanced USB Configuration USB Devices: 1 Drive, 2 Hubs	. Copyright (C) 2011 Ameri y – Copyright (C) 2011 Ame	ESC: Exit Lean Megatrends, Inc. erican Megatrends, Inc. Enables Legacy USB support. AUTO option disables legacy suppor if no USB devices are
Version 2.14.1219 Aptio Setup Utilit Advanced USB Configuration USB Devices: 1 Drive, 2 Hubs	. Copyright (C) 2011 Ameri y – Copyright (C) 2011 Ame	ESC: Exit Lean Megatrends, Inc. erican Megatrends, Inc. Enables Legacy USB support. AUTO option disables legacy suppor if no USB devices are connected. DISABLE
Version 2.14.1219. Aptio Setup Utility Advanced USB Configuration USB Devices: 1 Drive, 2 Hubs Legacy USB Support	(Copyright (C) 2011 Ameri y – Copyright (C) 2011 Ame [Enabled]	ESC: Exit Lean Megatrends, Inc. erican Megatrends, Inc. Enables Legacy USB support. AUTO option disables legacy suppor if no USB devices are connected. DISABLE option will keep USB
Version 2.14.1219. Aptio Setup Utilit Advanced USB Configuration USB Devices: 1 Drive, 2 Hubs Legacy USB Support EHCI Hand-off	Copyright (C) 2011 Ameri y - Copyright (C) 2011 Ame (Enabled) Legacy USB Support - Enabled	ESC: Exit Lean Megatrends, Inc. erican Megatrends, Inc. Enables Legacy USB support. AUTO option disables legacy suppor if no USB devices are connected. DISABLE option will keep USB devices available only r EFI applications.
Version 2.14.1219. Aptio Setup Utilit Advanced USB Configuration USB Devices: 1 Drive, 2 Hubs Legacy USB Support EHCI Hand-off USB hardware delays a	: Copyright (C) 2011 Ameri y – Copyright (C) 2011 Ame (Enabled) Legacy USB Support – Enabled Disabled	ESC: Exit Lean Megatrends, Inc. erican Megatrends, Inc. Enables Legacy USB support. AUTO option disables legacy suppor if no USB devices are connected. DISABLE option will keep USB devices available only r EFI applications.
Version 2.14.1219. Aptio Setup Utilit Advanced USB Configuration USB Devices: 1 Drive, 2 Hubs Legacy USB Support EHCI Hand-off USB hardware delays a USB transfer time-out	: Copyright (C) 2011 Ameri y – Copyright (C) 2011 Ame (Enabled) Legacy USB Support – Enabled Disabled Auto	ESC: Exit LCan Megatrends, Inc. erican Megatrends, Inc. Enables Legacy USB support. AUTO option disables legacy suppor if no USB devices are connected. DISABLE option will keep USB devices available only r EFI applications.
Version 2.14.1219. Aptio Setup Utilit Advanced USB Configuration USB Devices: 1 Drive, 2 Hubs Legacy USB Support EHCI Hand-off USB hardware delays a USB transfer time-out Device reset time-out	. Copyright (C) 2011 Ameri y – Copyright (C) 2011 Ame [Enabled] Legacy USB Support – Enabled Disabled Auto	ESC: Exit Lean Megatrends, Inc. erican Megatrends, Inc. Enables Legacy USB support. AUTO option disables legacy suppor if no USB devices are connected. DISABLE option will keep USB devices available only r EFI applications. : Select Screen : Select Item
Version 2.14.1219. Aptio Setup Utility Advanced USB Configuration USB Devices: 1 Drive, 2 Hubs Legacy USB Support EHCI Hand-off USB hardware delays a USB transfer time-out Device reset time-out Device power-up delay	Copyright (C) 2011 Ameri y - Copyright (C) 2011 Ame [Enabled] Legacy USB Support - Enabled Disabled Auto	ESC: Exit Lean Megatrends, Inc. erican Megatrends, Inc. Enables Legacy USB support. AUTO option disables legacy suppor if no USB devices are connected. DISABLE option will keep USB devices available only r EFI applications. : Select Screen : Select Ttem Enter: Select
Version 2.14.1219 Aptio Setup Utility Advanced USB Configuration USB Devices: 1 Drive, 2 Hubs Legacy USB Support EHCI Hand-off USB hardware delays a USB transfer time-out Device power-up delay Mass Storage Devices:	Copyright (C) 2011 Ameri y - Copyright (C) 2011 Ame [Enabled] Legacy USB Support - Enabled Disabled Auto	ESC: Exit LCAN Megatrends, Inc. erican Megatrends, Inc. Enables Legacy USB support. AUTO option disables legacy suppor if no USB devices are connected. DISABLE option will keep USB devices available only r EFI applications. : Select Screen : Select Item Enter: Select +/-: Change Opt.
Version 2.14.1219 Aptio Setup Utility Advanced USB Configuration USB Devices: 1 Drive, 2 Hubs Legacy USB Support EHCI Hand-off USB hardware delays a USB transfer time-out Device power-up delay Mass Storage Devices: JetFlashTranscend 16B	Copyright (C) 2011 Ameri y - Copyright (C) 2011 Ame [Enabled] Legacy USB Support - Enabled Disabled Auto	ESC: Exit LCAN Megatrends, Inc. erican Megatrends, Inc. Enables Legacy USB support. AUTO option disables legacy suppor if no USB devices are connected. DISABLE option will keep USB devices available only r EFI applications. : Select Screen : Select Ttem Enter: Select +/-: Change Opt. F1: General Help
Version 2.14.1219. Aptio Setup Utilit Advanced USB Configuration USB Devices: 1 Drive, 2 Hubs Legacy USB Support EHCI Hand-off USB hardware delays a USB transfer time-out Device reset time-out De	Copyright (C) 2011 Ameri y - Copyright (C) 2011 Ame (Enabled) Legacy USB Support - Enabled Disabled Auto	ESC: Exit Lean Megatrends, Inc. erican Megatrends, Inc. Enables Legacy USB support. AUTO option disables legacy suppor if no USB devices are connected. DISABLE option will keep USB devices available only r EFI applications. : Select Screen : Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values Devices available of Screen
Version 2.14.1219. Aptio Setup Utilit Advanced USB Configuration USB Devices: 1 Drive, 2 Hubs Legacy USB Support EHCI Hand-off USB hardware delays a USB transfer time-out Device reset time-out Device power-up delay Mass Storage Devices: JetFlashTranscend 16B	: Copyright (C) 2011 Ameri y - Copyright (C) 2011 Ame [Enabled] Legacy USB Support - Enabled Disabled Auto	ESC: Exit Lean Megatrends, Inc. erican Megatrends, Inc. Enables Legacy USB support. AUTO option disables legacy suppor if no USB devices are connected. DISABLE option will keep USB devices available only r EFI applications. : Select Screen : Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Sup & Fxit

#### **EHCI Hand-Off**

It allows you to enable support for operating systems which do not have the Enhanced Host Controller Interface hand-off (EHCI hand-off ) feature for USB devices.

Option	Description	
Enabled	Enable this feature	
Disabled	Disable this feature	



## **Bios Settings**

### USB Hardware Delays a

### The menu sets delay time for USB operations.

ltem	Description	
USB transfer	set transfers to an endpoint to complete	
time-out	within a specific time.	
	<ul> <li>If set to zero, transfers will not time out</li> </ul>	
	because the host controller will not cancel	
	the transfer. In this case, the transfer waits	
	indefinitely until it is manually canceled or	
	the transfer completes normally.	
	<ul> <li>If set to a nonzero value (time-out inter-</li> </ul>	
	val), the host controller starts a timer when	
	it receives the transfer request. When the	
	timer exceeds the set time-out interval, the	
	request is canceled.	
Device reset	This option sets the reset timing for the	
time-out	USB Mass Storage to be initialized.	
	When set to 10 Sec, the BIOS will wait for	
	up to 30 seconds for the USB flash drive to	
	initialize.	
Device	This option sets the power-up timing for	
power-up	the USB Mass Storage to be initialized.	
delay		

Aptio Setup Utility – Copyright (C) 2011 American Megatrends, Inc. Advanced		
USB Configuration	The time-out value for Control Bulk and	
USB Devices: 1 Drive, 2 Hubs	Interrupt transfers.	
Legacy USB Support [Enabled] EHCI Hand-off USB hardware delays a USB transfer time-out 1 Device reset time-out Device rower-up delay Mass Storage Devices: JetFlashTranscend 168 [Auto]	Select Screen Select Item +/-: Change Opt. F1: General Help F2: Previous Values C2: Optimate Defoutto	
	F4: Save & Exit ESC: Exit	
Version 2.14.1219. Copyright (C) 2011 America	n Megatrends, Inc.	

## **Bios Settings**

#### **SuperIO Configuration**

In this screen, you will be able to modify the IRQ address of the serial and parallel ports which are provided by the Winbond W83627DHG chip.

Aptio Setup Utility – Copyright (C) 2011 American Megatrends, Inc. Advanced		
Super IO Configuration Super IO Chip Winbond W83627DHG > Serial Port 0 Configuration > Serial Port 1 Configuration > Parallel Port Configuration	Set Parameters of Serial Port O (COMA)	
	++: Select Screen 11: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.14.1219. Copyright (C) 2011 Americ	an Megatrends, Inc.	

#### Serial Port 0/1 Configuration

This option specifies the base I/O port address and Interrupt Request address of serial port 0 and 1.

item	Selection	
Enabled/	Set this value to prevent the serial port from	
Disabled	accessing any system resources. When this	
	option is set to Disabled, the serial port physically	
	becomes unavailable.	
Change	Selects the serial port base address and IRQ for	
Settings	the interrupt address.	

#### Copyright (C) 2011 American Megatrends, Inc aptio Setup Utility Advanced Serial Port 0 Configuration Enable or Disable Serial Port (COM) Serial Port Device Settings [Enabled] IO=3F8h; IRQ=4; Change Settings [Auto] ↔: Select Screen †∔: Select Item Enter: Select +∕−: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit rsion 2.14.1219. Copyright (C) 2011 American Megatrends, Ind

#### **Parallel Port Configuration**

This option specifies the I/O address used by the parallel port.

Item	Selection
Parallel Port	Enable or disable this parallel port
Device	Selects the serial port base address
Settings	
Device Mode	Selects the modes from the following possibilities: STD Printer, Standard Parallel Port (SPP), Enhanced Parallel Port (EPP) and Extended Capabilities Port (ECP). Currently, new products have support of a mixture of these protocols. Consult your device's specification for exact protocols supported by your product.
	SPP: denotes normal or standard mode.
	EPP: used specifically for non-printer devices that would attach to the parallel port, particularly storage devices that needed the highest possible transfer rate.
Network	etm lisediopetଙ୍କରେ provide improved speed and functionality for printers



### **Bios Settings**

#### **PC Health Status**

This menu shows the hardware monitor configuration settings. Select an item then press <Enter> to display the configuration options.

#### SYSIN/CPUIN/AUXIN Temperature

The onboard hardware monitor automatically detects and displays the CPU and motherboard temperatures.

#### FAN1/FAN2/FAN3/FAN4 Speed

The onboard hardware monitor automatically detects and displays the CPU, chassis and system fan speeds in rotations per minute (RPM). If the fan is not connected to the motherboard, it displays N/A.

#### CPU Voltage, 3.3V voltage, 5V voltage, 12V voltage

The onboard hardware monitor automatically detects the voltage output through the onboard voltage regulators.

Aptio Setup Utility Advanced	) – Copyright (C) 2011 Ameri	ican Megatrends, Inc.
Pc Health Status		Smart Fan Mode Select
Smart Fan Mode Configur SYSTIN temperature CPUTIN temperature AUXTIN temperature FAN1 Speed (SYS FAN) FAN2 Speed (AUX FAN) FAN3 Speed (CPU FAN1) FAN5 Speed (CPU FAN1) FAN5 Speed (AUX FAN1) CPUVCORE +12V AVCC 3VCC SV V_CPU_VCCID 1.5V 3VSB	ation : +27 C : +33 C : -29 C : N/A : N/A : N/A : N/A : 2721 RPM : +1.008 V : +12.032 V : +3.456 V : +3.456 V : +1.528 V : +3.456 V	++: Select Screen 14: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Version 2.14.1219.	Copyright (C) 2011 America	an Megatrends, Inc.

#### Smart Fan Mode Configuration

It allows you to configure the smart fan feature. You can manually turn on the CPU fan or set the target CPU temperature at which the CPU fan will start running if the fan is not yet turned on. And the CPU fan can also be turned off automatically if the temperature for the CPU is at or below the specified value. Refer to *Motherboard Layout* on Chapter 3 *Block Diagram* for CPU fan connectors.

ltem	Selection
Manual	Manually set the fan speed
Mode	
Smart Fan	set the target system temperature at which
Control	the system fan will start running if the fan is
	not yet turned on with this mode. And the
	system fan can also be turned off automati-
	cally if the temperature for the system is at
	or below the specified value.

#### FCTRL5/FCTRL6 FAN Mode

The FCTRL5 is for setting the parameters for FAN2 and FAN4 for CPU fans.

The FCTRL6 is for setting the parameter for FAN1 and FAN3 for Auxiliary fans.



## **Bios Settings**

#### **Console Redirection**

Use this menu to set the settings for BIOS remote access feature.

ltem	Selection	
Console Redirection	Enable or disable BIOS	
	through remote access	
Console Redirection Set-	Enter to view more options	
tings		

#### **COM0/COM1 Console Redirection Settings**

ltem	Selection
Terminal Type	Sets the connection termi-
	nal type
Bits per second, Data bits,	Sets the terminal connec-
Parity, Stop Bits, Flow	tion parameters such as
Control	the baud rate, parity check
	mechanism, etc.

Aptio Setup Utility – Copyright (C) 2011 American Megatrends, Inc. Advanced		
COMO Console Redirection [Enabled] ▶ Console Redirection Settings	Console Redirection Enable or Disable.	
COM1 Console Redirection [Disabled] ▶ Console Redirection Settings		
	++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Ont.	
	F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.		

## **Bios Settings**

#### Lan Bypass Control

In this screen, you can configure the Lan Bypass functionality. The system have 3 LAN modules: Left module and two expansion models: M1 and M2 on the right (when facing the front panel).

#### LAN Bypass for M1/M2/Left Modu1

You can activate or deactivate the Lan Bypass ports. For the description of the physical ports that are capable of the LAN Bypass function, refer to the *Front Panel Feature* in *Chapter 1 Introduction*.

M1 denotes Ethernet expansion module No.1 and M2 denotes Ethernet module No.2.

Left Modu1 denotes the module on the far left when facing the front panel. Note that Left Modu1 also supports Lanner Generation 3 Bypass. See appendix D Programming Generation 2 and 3 LAN Bypass for more information

#### SYSOFF bypass for M1/M2/Left Modu1

You can enable or disable the automatic activation of hardware Lan Bypass function in the event of a power failure. Hardware Bypass can automatically activate to allow network traffic to continue.

The Lan bypass can be turned on or off in two system states, i.e., power on and power off. The following are the BIOS menu and illustration of the possibilities of LAN bypass configuration in each state.

Bypass settings	LAN Bypass for Port1 and Port 2		LAN Bypass 1&2 when power off
System Status			
Power on	Enabled	Disabled	Enabled
	Bypass	Non-Bypass	
Power off	Bypass	Bypass	
Bypass settings	LAN Bypass fo Port 2	or Port1 and	LAN Bypass 1&2 when power off
System Status			
Power on	Enabled	Disabled	Disabled
	Non-Bypass	Non-Bypass	
Power off	Non-Bypass	Non-Bypass	

Aptio Setup Utility Advanced	y – Copyright (C) 2011	L American Megatrends, Inc.
Bypass for M1 Bypass for M2 Bypass for Left Modul SYSOFF bypass for M1 SYSOFF bypass for M2 SYSOFF bypass for Lef	(Disabled) (Disabled) (Disabled) (Enabled) (Enabled) (Enabled)	LAN bypass for Module1
		++: Select Screen 14: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Version 2.14.1219.	. Copyright (C) 2011 A	American Megatrends, Inc.

## **Bios Settings**

### **CPU PPM Configuration**

In this section, you can configure the CPU Processor Power Management.

### EIST (Enhanced Intel SpeedStep Technology)

It allows you to enable or disable the EIST.

Option	Description
Enable	The operating system
	controls the CPU speed
Disabled	The CPU runs at its de-
	fault speed.

Enhanced Intel SpeedStep® technology (EIST) allows the system to dynamically adjust processor voltage and core frequency, which can result in decreased average power consumption and decreased average heat production. There are some system requirements must be met, including CPU, chipset, motherboard, BIOS and operation system. Please refer to Intel website for more information



### **Bios Settings**

PCH Parameters

++: Select Screen
T4: Select Item
Enter: Select
+/-: Change Opt,
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
FSC: Fxit

USB Configuration

++: Select Screen
fl: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults

++: Select Screen +: Select Item Enter: Select +/-: Change Opt, F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

settings

Copyright (C) 2011 American Megatrends, Inc

Copyright (C) 2011 American Megatrends, Inc.

Aptio Setup

Utility Chipset

System Agent (SA) Configuration

Aptio Setup Utility Chipset

1.6.0.0

C206

05/B3

[4-5 Seconds] [Last State]

Intel PCH RC Version

SLP\_S4 Assertion Widt Restore AC Power Loss

Intel PCH SKU Name

Intel PCH Rev ID

### Chipset

The chipset menu will let you further configure your Intel CPU and PCH capabilities:

#### PCH I/O Configuration

It shows the model name and version of the Intel Platform Controller Hub on the system.

#### **USB** Configuration

ltem	Selection
EHCI1/EHCI2	The EHCI specification describes a host
	controller that correctly supports all
	compliant USB 2.0 low-, full-, and high-
	speed devices. Select to either enable
	or disable the controller.

# F4: Save & Exit ESC: Exit Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc. Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc. Chipset USB Configuration EHC01 [Enabled] USB Ports Per-Port Di [Disabled]

sion 2.14.1219. Copyright (C) 2011 American Megatrends, Inc

#### SLP\_S4 Assertion Width

Select the mininum assertion width of the SLP\_S4# signal. This field indicates the minimum assertion width of the SLP\_S4# signal to ensure that the DRAM modules have been safely power-cycled. SLP\_S4# is a signal for power plane control. This signal shuts off power to all non-critical systems when in the S4 (Suspend to Disk) or S5 (Soft Off) state.



## **Bios Settings**

#### **Restore on AC Power Loss**

This option lets you set the state of the system when it has just recovered from a power outage.

Option	Description	
Power Off	When setting to Power Off, the system goes into	
	"off state" after an AC power interruption.	
Power On	When setting to Power on, the system turns on	
	automatically after a power interruption	
Last State	When setting to Last State, the system goes	
	into whatever the state was before the power	
	interruption.	
1		



#### Intel VT-d

Select to enable or disable the Intel Virtualization Technology for Directed I/O" (VT-d). The Memory and I/O virtualization are supported by the chipset as part of Intel Virtualization Techonology for hardware-assisted virtualization.



#### **Memory Configuration**

It shows the memory capacity of the system and the installed memory on the system.

Aptio Setup Utility – Copyright (C) 2011 American Megatrends, Inc. Chipset			
Memory Information			
Memory RC Version	1.6.0.0		
Memory Frequency	1333 Mhz		
Iotal Memory	4096 MB (DDR3)		
DIMM#0 DIMM#1	Not Present		
DIMM#2	2048 MB (DDR3)		
DIMM#3	2048 MB (DDR3)		
CAS Latency (tCL)	9		
Minimum delay time		++: Select Screen	
CAS to RAS (tRCDm	9	↑↓: Select Item	
Row Precharge (tR	9	Enter: Select	
Active to Prechar	24	+/-: Change Opt.	
		F1: General Help	
		F2: Previous Values	
		F3: Uptimized Defaults	
		F90. Evit	
		LOO. LAIT	
Version 2 14 1219	Conuright (C) 2011 America	an Megatrends Inc	

### **Bios Settings**

### **Boot Setup**

Select the Boot tab from the setup screen to enter the Boot BIOS Setup screen. You can select any of the items in the left frame of the screen, such as Boot Device Priority, to go to the sub menu for that item. You can display an Boot BIOS Setup option by highlighting it using the <Arrow> keys. Select an item on the Boot Setup screen to access the sub menus for the following described functions.

Aptio Setup Utility – Copyright (C) 2011 American Megatrends, Inc. Main Advanced Chipset <mark>Boot</mark> Security Save & Exit		
Boot Configuration Setup Prompt Timeout Bootup NumLock State	1 [0n]	Number of seconds to wait for setup activation key.
Quiet Boot	[Disabled]	65535(0xFFFF) means indefinite waiting.
CSM16 Module Version	07.69	
GateA20 Active Option ROM Messages INT19 Trap Response	[Upon Request] [Force BIOS] [Immediate]	++: Select Screen 11: Select Item
Boot Option Priorities Boot Option #1 Boot Option #2 Hand Drive BBS Prioritie	[JetFlashTranscend] [UEFI: JetFlashTran] es	Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults 54: Source 2 Suit
Version 2.14.1219.	Copyright (C) 2011 America	ESC: Exit

#### **Boot Settings Configuration**

In this screen, you will be able to configure the boot procedures and the related elements.

Items	Options
Setup Prompt Timeout	Specify the number of seconds
	for the boot setup prompt to
	wait for user's intervention
	during the POST.
Bootup Num-Lock State	This option lets you to
	enable or disable the
	function of the NumLock
	key.
Quiet Boot	Enabling this item allows
	the BIOS to suppress the
	message displayed during
	the POST.
GateA20 Active	This option sets the A20
	address line controlling
	method for handling above
	1MB memory access. By
	enabling the A20 gate, we
	have access to all 32 lines on
	the address bus, and hence,
	can refrence 32 bit addresses,
	or up to 0xFFFFFFFF - 4 GB
	of memory. The controlling
	mode includes:
	Upon Request: when it is
	enabled by user programs.
	ALWAYS: never disables the A20 line

## **Bios Settings**

Items	Options
Option ROM Messages	This option controls the display of ROM messages form the BIOS of add- on devices such as the graphics card or the SATA controller during the start- up sequence.
	Force BIOS: When setting to Force BIOS, third-party ROM messages will be forced to display during the start-up sequence.
	Keep Current: When setting to Keep Current, third-party ROM messages will only be displayed if the device's manufacturer has set the add-on device to do so.
Interrupt 19 Trap Response	Set this value to configure how option ROMs such as network controllers trap BIOS interrupt 19.
Boot Option Priorities	Use this screen to specify the order in which the system checks for the device to boot from.
Hard Drive BBS Priorities	You will enter a submenu that presents all the drives connected to the system. Here you can define the boot order for the Hard disks

### **Bios Settings**

### **Security Settings**

Select Security Setup from the Setup main BIOS setup menu. All Security Setup options, such as password protection and virus protection, are described in this section. To access the sub menu for the following items, select the item and press <Enter>:



#### **Administrator Password**

If you have set an administrator password, you should enter the administrator password for accessing the system. Otherwise, you will only be able to see or change selected fields in the BIOS setup program.

#### **User Password**

If you have set a user password, you must enter the user password for accessing the system.

To set an Administrator/User password:

- 1. Select the option item and press Enter.
- 2. From the Create New Password box, key in a password, then press enter.
- 3. Confirm the password when prompted.

To change an administrator password:

- 1. Select the option item and press Enter.
- 2. From the Enter Current Password box, key in the current password, then press enter.
- 3. From the Create New Password box, key in a new password, then press Enter.
- 4. Confirm the password when prompted.

To clear the administrator password, follow the same steps as in changing an administrator password, then press Enter when prompted to create/confirm the password.

### **Bios Settings**

### Save & Exit

Select the Exit tab from the setup screen to enter the Exit BIOS Setup screen. You can display an Exit BIOS Setup option by highlighting it using the <Arrow> keys. The following table lists the options in this menu.

Item	Options
Saving Changes and Exit	Select this option to save
	changes and exit the BIOS
	menu. It will automatically
	resets if the changes made
	require rebooting the
	system to take effect.
Discard Changes and Exit	Select this option to discard
	changes and exit and BIOS
	menu to continue the
	booting process.
Save Changes and Reset	When you have completed
	the system configuration
	changes, select this option
	to leave setup and reboot
	the computer so the new
	system configuration
	parameters can take effect.
Discard Changes and Reset	This option allows you
	to discard the selections
	you made and restore the
	previously saved values.
	After selecting this option,
	a confirmation appears.
	Select Yes to discard any
	changes and load the
	previously saved values.
Save Changes	Save your changes
Discard Changes	Discard changes
Restore Defaults	Restore to factory defaults
Save as User Defaults	Save all of your changes as
	an user default setting.
Restore User Defaults	Loads your saved user
	default setting.
Boot Override	This section of the Boot
	Wenu allows booting from a
	specific device immediately.
	Inerefore you should see
	an entry for all bootable
Launch EEI Shall from	This option allows you to
filosystem douise	attempt to laws sou to
	Chall application (challs)
	Shell application (snellx64.
	en) from one of the avail-
	able filesystem devices.



Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

## **Appendix A**

### **Driver Installation**

## Appendix A: Driver Installation

### LAN Adapters Driver Installation

This section provides the instructions on how to install Intel<sup>®</sup> Gigabit LAN adapter drivers.

### **On the Windows OS**

To install the Intel® Gigabit LAN controller driver on a Windows Operating System:

To install the Intel® Gigabit LAN controller driver on a Windows Operating System:

- 1. Restart the computer, and then log on with Administrator privileges.
- 2. Insert the Drivers and User's Manual CD to the USBoptical drive.
- 3. Browse the contents of the support CD to locate the file PRO2KXP.EXE from the \Driver\LAN folder. Double-click the Executable file.
- 4. The program starts by extracting the file. Click Next to continue the installation process.
- 5. Click **Next** when the Intel<sup>®</sup> PRO Network Connections –InstallShield Wizard window appears.



6. Select the "I accept the terms in the license agreement" and then click Next.



7. Select the programs that you wish to install. Make sure that you have selected the drivers.

Intel(R) Network Connections	
Setup Options Select the program features you want installed.	(intel)
Install:	
Porivers     Intel(R) PROSet for Windows* Device Manager     Of Advanced Network Services     Intel(R) Network Connections SNMP Agent	
Feature Description	Next > Cancel

- 8. Click Nest and then Install to proceed the installation.
- 9. Click Finish to close the installation program.

To verify the LAN controller driver installation, do the following steps:

1. Right-click on the My Computer icon, and then select Properties form the menu.

Click the Hardware tab, then click the Device Manager button.

Click the + sign next to the Network adapters, then the Intel Pro/1000 [.....] adapter should be listed.

Note: The system uses Intel 82574L and I350 Ethernet controllers, you could obtain the latest drivers at the Intel download center: http://downloadcenter.intel.com/ You could also use the web based utility to detect the needed drivers automatically by visiting the following website: http://www.intel.com/support/network/detect.htm

Network Application Platforms

## **Appendix A**

### **Driver Installation**

### **On Linux**

Follow these instructions when installing the Intel<sup>®</sup> LAN controller base driver for the in Red Hat<sup>®</sup> and Linux operating system.

- 1. Insert the motherboard/system support CD to the optical drive and mount the optional drive in the Linux platform.
- 2. Copy the base driver tar file from the motherboard/ system support CD to the directory of your local hard disk. The Intel<sup>®</sup> LAN driver for Linux OS is located in the following directory:

\Driver\LAN\_Driver\PRO1000\LINUX. The name format of driver file is "e1000-<Version>.tar.gz". For example: the file name of driver version 7.0.38 is "e1000-7.0.38. tar.gz".

3. Untar/unzip the archive, where <x.x.x> is the version number for the driver tar file:

tar zxf e1000-<x.x.x>.tar.gz

4. Change to the driver src directory on your system, where <x.x.x> is the version number for the driver tar:

cd e1000-<x.x.x>/src/

5. Compile the driver module by typing the following command:

make install

6. The binary will be installed as:

/lib/modules/<kernel\_version>/kernel/drivers/net/ e1000.o

The install locations listed above are the default locations. They might not be correct for certain Linux distributions.

- 7. Load the module using either the insmod or modprobe command:
  - modprobe igb

insmod igb

Note that for 2.6 kernels the insmod command can be used if the full path to the driver module is specified. For example:

insmod /lib/modules/<KERNEL VERSION>/kernel/ drivers/net/igb/igb.ko

With 2.6 based kernels also make sure that older igb drivers are removed from the kernel, before loading the new module:

rmmod igb; modprobe igb

 Assign an IP address to the interface by entering the following, where <x> is the interface number:

ifconfig eth<x> <IP\_address>

 Verify that the interface works. Enter the following, where <IP\_address> is the IP address for another machine on the same subnet as the interface that is being tested:

ping <IP\_address>



<sup>\*</sup>Note: The system uses Intel 82574L and I350 Ethernet controllers, you could obtain the latest drivers at the Intel download center: http://downloadcenter.intel.com/

## **Appendix A**

### **VGA Driver Installation**

This section provides the instructions on how to install VGA adapter drivers on your windows.

- 1. Restart the computer, and then log on with Administrator privileges.
- 2. Insert the Drivers and User's Manual CD to the optical drive.
- 3. Browse the contents of the support CD under the directory: \Driver\VGA.
- 4. You may need to install the drivers manually if there is no available executable program for installing the drivers automatically.
- 5. To install the drivers manually, use the Found New Hardware wizard of the Windows.
- 6. During the steps make sure that you choose to install the hardware by manually selecting the drivers that you wish to install. When this option appears, you should select the directory containing the drivers for the VGA adapter.

This platform supports processors with an integrated Intel® HD Graphics is included. You could visit the Intel support website for the generic VGA driver on Intel support site. It is a unified drivers for all platforms using integrated video controllers on processors. So, you can install the driver posted on this site:

http://downloadcenter.intel.com/SearchResult.aspx?la ng=eng&ProductFamily=Graphics&ProductLine=Proc essor+graphics&ProductProduct=2nd+Generation+In tel%C2%AE+Core%E2%84%A2+Processors+with+Inte l%C2%AE+HD+Graphics+3000%2f2000&ProdId=3319 &LineId=3310&FamilyId=39

You could also use the web based utility to detect the needed drivers automatically by visiting the following website:

#### http://www.intel.com/support/graphics/detect.htm

On this web, it features the Intel<sup>®</sup> Driver Update Utility to keep your Intel graphics driver up-to-date. It detects which graphics updates are relevant to your computer, and then helps you install them quickly and easily.

## **Appendix B**

## Appendix B: Setting up Console Redirections

Console redirection lets you monitor and configure a system from a remote terminal computer by re-directing keyboard input and text output through the serial port. This following steps illustrate how to use this feature.

- 1. Connect one end of the console cable to console port of the system and the other end to serial port of the Remote Client System.
- 2. Configure the following settings in the BIOS Setup menu for the device: Please refer to the *Remote Access Settings* on Chapter 4 *BIOS Settings*.

BIOS > Advanced > Serial Port Console Redirection > select enabled first and then go to >Console Redirection Settings > [115200, 8, n, 1]

- 3. Configure Console Redirection on the client system. The following illustration is an example on Windows platform:
  - a. A. Click the start button, point to Programs > Accessories > Communications and select Hyper Terminal.
  - b. B. Enter any name for the new connection and select any icon.
  - c. Click OK.
  - d. From the "Connect to". Pull-down menu, select the appropriate Com port on the client system and click OK.
  - e. Select 115200 for the Baud Rate, None. for Flow contorl, 8 for the Data Bit, None for Parity Check, and 1 for the Stop Bit.



## **Appendix C**

### **Programming the LCM**

## Appendix C: Programming the LCM

The LCD panel module (LCM) is designed to provide realtime operating status and configuration information for the system. For sample LCM code, see *LCM* foler in the *Driver and Manual CD*. The driver and the program library can also be found in the folder.

The system supports the following type of LCM:

• Parallel Text-based LCM: The LCM connects to the motherboard's parallel port. The LCD screen can display 2 lines, 20 characters per line.

#### **Parallel Text-based LCM**

#### Build

To build program source code on Linux platform, use the following steps as a guideline:

- 1. Copy the proper makefile from the Driver and Manual CD to your system: Makefile.linux
- 2. Type make to build source code:

make Makefile (Note: omit the file extensions)

After compiled, the executable programs (plcm\_test, plcm\_cursor\_char, Test) and the driver (plcm\_drv.ko or plcm\_drv.o) will appear in the program's folder.



**Note:** The OS supported by Lanner Bypass function include platforms based on Linux Kernel series 2.4.x and Linux Kernel series 2.6.x.

#### Install

Install the driver and create a node in the /dev directory by:

#insmod plcm\_drv.ko

#mknod /dev/plcm\_drv c 241 0



**Note:** If you cannot install the driver, check whether you have enabled the parallel port in the BIOS setting .

#### Execution

This section contains sample executable programs that you could test on your platform. It demonstrates some useful functionality that the LCM provides.

#### To execute, type:

#./plcm\_test

**Plcm\_cursor\_char.** This program provides a menu to demonstrate the following functions:

**Insert line** (set the starting line to either line 1 or line 2)

**Move Cursor right** (select to move the cursor to the right)

Move Cursor Left (select to move the cursor to the left)

**Add a char** (select to display a character on the LCM screen)

Clear (select to clear the LCM display)

Leave (select to leave the program)

To execute, type:

#./ plcm\_cursor\_char



**Note:** For descriptions of the command, refer to the Readme file contained within the program's folder.

## Appendix D

## **Appendix D: Programming Generation** 2 and 3 LAN Bypass

### **Lanner Generation 3 Bypass**

The bypass function is used to link two independent Ethernet ports when the system crashes or powers off. This means if your system is equipped with a LAN Bypass function, a condition in your system will not interrupt your network traffic. Different from the previous two generations (Gen1 and Gen2), the Lanner Bypass Gen 3 employs a programming method to control the bypass function by software. There are typically two communication status for the bypass function, one is "Normal" and another is "Bypass" status. Furthermore, the Lanner Bypass software is capable to control the bypass status in the following 3 states:

- 1. When the system powers off, it can be forced to enable the LAN Bypass function.
- 2. When the system is in the just-on state which is a brief moment when it powers up.
- 3. When the system is running

And the Lanner bypass possess the following features:

- 1. Communication through SMBUS (I2C)
- 2. Independent by pass status control for each pair up to a total of 4 pairs
- 3. Lanner Bypass Modules can bypass systems Ethernet ports on a host system during three instances: Just-on (Just-on is the brief moment when the internal power supply turns on and booting process starts), system off, or upon software request (during run-time).
- 4. Software programmable bypass or normal mode
- 5. Software programmable timer interval:

- JUST-ON watchdog timer, used during JUST-ON, has timer setting of 5~1275 seconds of timer interval.

 Run-Time watchdog timer, used during run-time, has setting of 1~255 seconds of timer interval.

6. Multiple Watchdog Timers:

-Two for run-time: It is designed to give you a more variety of controls of the bypass on port basis. By using dedicated watchdogs for different pairs of bypass, you have the flexibility to manage the bypass status for them differently.

-One for just-on: It is designed to give you the precise control of the bypass during this phase. You can use this timer to delay enabling the bypass in just-on state.

#### Please refer to

Please refer to the LAN Bypass Watchdog folder on the Driver and Manual CD.

For sample LAN bypass code and the Bypass Manual, see the LAN Bypass folder on the Driver and Manual CD or the Lanner Assist Website at http://assist.lannerinc.com. And browse the support center and look for Lanner LAN Bypass Module Manual under Software Utility Manuals folder (http://assist.lannerinc.com/modules/wfdownloads/ viewcat.php?cid=90).

Fro a description of the physical LAN ports equipped with this function, refer to Front Panel Features in Chapter 1 Introduction.

### **Lanner Generation 2 Bypass**

Unlike Lanner Generation 3 bypass, Generation 2 bypass is configured through the BIOS menu as shown below:

Aptio Setup Utility – Copyright (C) 2011 American Megatrends, Inc. Main <mark>Advanced</mark> Chipset Boot Security Save & Exit			
PXE Function	[Disabled]	PXE Function	
<ul> <li>CPU Configuration</li> <li>SATA Configuration</li> <li>USB Configuration</li> <li>Super IO Configuration</li> <li>H/X Monitor</li> <li>Serial Port Console Red:</li> <li>LAN bypass Configuration</li> <li>CPU PPM Configuration</li> </ul>	irection 1	++: Select Screen f1: Select Item Enter: Select +/-: Change Opt.	
		F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	
Version 2 14 1219	Conuright (C) 2011 America	n Megatrends Inc	

Aptio Setup Utility – Copyright (C) 2011 American Megatrends, Inc.

Advanced AN bypass for Module1 Bypass for M2 [Disabled] Bypass for Left Modul [Disabled] SYSOFF bypass for M1 [Enabled] SYSOFF bypass for M2 [Enabled] SYSOFF bypass for Lef [Enabled] ↔: Select Screen t↓: Select Item Enter: Select +/−: Change Opt F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit 2.14.1219. Copyright (C) 2011 American Megatrends

## **Appendix D**

### **Programming LAN Bypass**

There are two ways to enable the bypass on the system:

1. The LAN bypass can be turned on or off in two system states, i.e., power on and power off. The following are the illustration of the possibilities of LAN bypass configuration with respect to both power-on and power-off states.

S	1		
Bypass settings	LAN Bypass fo	LAN Bypass	
	Port 2		1&2 when
System Status			power off
	Enabled	Disabled	Enabled
PWR ON	Bypass	Non-Bypass	
PWR OFF	Bypass	Bypass	

Bypass settings	LAN Bypass fo	LAN Bypass	
	Port 2		1&2 when
System Status			power off
	Enabled	Disabled	Disabled
PWR ON	Non-Bypass	Non-Bypass	
PWR OFF	Non-Bypass	Non-Bypass	

2. A watchdog timer can be used to control the LAN Bypass function dynamically by programming. Lanner also provides sample code for bypass control with WDT via programming. For sample code, look in the LAN\_Bypass\_Watchdog directory under Driver and Manual CD.

To compile:

#gcc wdbp.c -o wdbp

then switch to a root account to run ./wdbp for excution:

#./wdbp

Commands:

Enable the bypass

#wdbp.exe –f

Set Watchdog Timer. This command will set the time interval at which the counter will start count down.

#wdbp.exe -wl xxx (xxx: 1-255 sec for timer count down)

Reset Watchdog Timer. This command will reset the watchdog timer's counter and the bypass status to non-bypass.

#wdbp.exe -wr xxx (xxx: 1-255 sec for timer count down)



In the BIOS:

 M1 denotes expansion Ethernet module No.1 and M2 denotes expansion Ethernet module No.2. For customization opportunity with these modules, visit Lanner website:

http://www.lannerinc.com/x86\_Network\_ Appliances/Network\_Modules

2. Left Modu1 denotes the module on the far left when facing the front panel. This module supports both Lanner Generation 2 and Generation 3 bypass.

For a description of the physical LAN ports equipped with this functionality, refer to *Front Panel Features* in Chapter 1 Introduction.

## **Appendix E**

### **Terms and Conditions**

## Appendix E: Terms and Conditions

### **Warranty Policy**

- 1. All products are under warranty against defects in materials and workmanship for a period of one year from the date of purchase.
- 2. The buyer will bear the return freight charges for goods returned for repair within the warranty period; whereas the manufacturer will bear the after service freight charges for goods returned to the user.
- 3. The buyer will pay for repair (for replaced components plus service time) and transportation charges (both ways) for items after the expiration of the warranty period.
- 4. If the RMA Service Request Form does not meet the stated requirement as listed on "RMA Service," RMA goods will be returned at customer's expense.
- 5. The following conditions are excluded from this warranty:

Improper or inadequate maintenance by the customer Unauthorized modification, misuse, or reversed engineering of the product Operation outside of the environmental specifications for the product.

### **RMA Service**

Requesting a RMA#

- 6. To obtain a RMA number, simply fill out and fax the "RMA Request Form" to your supplier.
- 7. The customer is required to fill out the problem code as listed. If your problem is not among the codes listed, please write the symptom description in the remarks box.
- 8. Ship the defective unit(s) on freight prepaid terms. Use the original packing materials when possible.
- 9. Mark the RMA# clearly on the box.
  - **Note:** Customer is responsible for shipping damage(s) resulting from inadequate/loose packing of the defective unit(s). All RMA# are valid for 30 days only; RMA goods received after the effective RMA# period will be rejected.

## **Appendix E**

### RMA Service Request Form

When requesting RMA service, please fill out the following form. Without this form enclosed, your RMA cannot be processed.

RMA No	Reasons to Return: □ Repair(Please include failure details)         Image: Ima		
Compa	iny:	Contact Person:	
Phone	No.	Purchased Date:	
Fax No	.:	Applied Date:	
Return Shippir 🗆 Othe	Shipping Addr ng by: 🗆 Air Fre rs:	ess: eight	
	T		
Item	Model Name	Serial Number	Configuration

Item	Problem Code	Failure Status		
*Problem Code:				
01:D.O.A	۹.	07: BIOS Problem	13: SCSI	19: DIO

01:D.O.A. 02: Second Time R.M.A. 03: CMOS Data Lost 04: FDC Fail 05: HDC Fail 06: Bad Slot

07: BIOS Problem 08: Keyboard Controller Fail 09: Cache RMA Problem 10: Memory Socket Bad 11: Hang Up Software 12: Out Look Damage 13: SCSI
 14: LPT Port
 15: PS2
 16: LAN
 17: COM Port
 18: Watchdog Timer

19: DIO 20: Buzzer 21: Shut Down 22: Panel Fail 23: CRT Fail 24: Others (PIs specify)

#### **Request Party**

**Confirmed By Supplier** 

Authorized Signature / Date

#### Authorized Signature / Date